

Kumanda Uygulamasını yüklemek için QR kodu tarayın.



Ürünümüzü satın aldığınız için çok teşekkür ederiz.

Ünitenizi kullanmadan önce lütfen bu kılavuzu dikkatle okuyun ve gelecekte referans almak için saklayın.

- Bu kılavuz, çalışma sırasında dikkat etmeniz gereken önlemlerin ayrıntılı açıklamasını sunar.
- Kablolu kumandanın doğru servisini garantilemek için lütfen üniteyi kullanmadan önce bu kılavuzu dikkatle okuyun.
- Gelecekte referans almayı kolaylaştırmak için kurduktan sonra bu kılavuzu saklayın.

İÇİNDEKİLER

1 GENEL GÜVENLİK ÖNLEMLERİ

•	1.1	Doküman hakkında	01
٠	1.2	Kullanıcı için	02

2 KULLANICI ARAYÜZÜNE BİR BAKIŞ

•	2.1	Kablolu kumandanın görünümü	05
•	2.2	Durum simaeleri	06

3 ANA SAYFALARIN KULLANIMI

• 3.1 Ana sayfalar hakkında 07

4 MENÜ YAPISI

٠	4.1	Menü yapısı hakkında ·····	11
•	4.2	Menü yapısına gitmek için	11
•	4.3	Menü yapısında gezinmek için	11

5 TEMEL KULLANIM

•	5.1	Ekran kilidini açma	12
•	5.2	Kontrolleri AÇIK/KAPALI konuma getirme	14
•	5.3	Sıcaklığı ayarlama ·····	19
•	5.4	Alan çalışma modunu ayarlama	22

6 AĞ YAPILANDIRMA KURALLARI

•	6.1	Kablolu kumanda ayarı	25
•	6.2	Mobil cihaz ayarı	28

7 KURULUM KILAVUZU

8

MODBUS EŞLEME TABLOSU					
•	7.4	Ön kapağın takılması	46		
•	7.3	Kurulum prosedürü ve kablolu kumandayla uvumlu avar	39		
٠	7.2	Diğer önlemler	38		
٠	7.1	Güvenlik önlemleri	35		

•	8.1	Modbus port iletişim teknik özellikleri		48
---	-----	---	--	----

1 GENEL GÜVENLİK ÖNLEMLERİ

1.1 Doküman hakkında

- Orijinal belge, İngilizce yazılmıştır. Diğer tüm dillerdeki belgeler çeviridir.
- Bu dokümanda açıklanan önlemler oldukça önemli konuları kapsar, bunları dikkatle izleyin.
- Kurulum kılavuzunda açıklanan tüm işlemler, yetkili bir kurucu tarafından gerçekleştirilmelidir.
- 1.1.1 Uyarıların ve sembollerin anlamı

⚠ TEHLİKE

Ölüm veya ciddi yaralanmaya yol açan bir durum belirtir.

🕂 TEHLİKE: ELEKTRİK ÇARPMASI RİSKİ

Elektrik çarpmasına yol açabilecek bir durum belirtir.

🕂 TEHLİKE: YANMA RİSKİ

Aşırı sıcak veya soğuk nedeniyle yanmaya yol açabilecek bir durum belirtir.

\land UYARI

Ölüm veya ciddi yaralanmaya yol açabilecek bir durum belirtir.

🕂 DİKKAT

Küçük veya orta düzeyde yaralanmaya yol açabilecek bir durum belirtir.

♀ NOT

Ekipman veya özelliklerde hasara yol açabilecek bir durum belirtir.

i BİLGİ

Kullanışlı ipuçları veya ilave bilgileri belirtir.

1.2 Kullanıcı için

 Üniteyi nasıl çalıştıracağınızdan emin değilseniz kurucunuzla iletişime geçin. Cihaz, güvenliklerinden sorumlu bir kişi tarafından kendilerine cihazın kullanımıyla ilişkili nezaret edilmediği veya talimatlar verilmediği takdirde, çocuklar da dahil olmak üzere, kısıtlı fiziksel, duyusal veya zihinsel kabiliyetlere ya da deneyim ve bilgi eksikliğine sahip kişiler tarafından kullanılmak üzere tasarlanmamıştır. Ürünle oynamadıklarından emin olmak için çocuklar gözetim altında tutulmalıdır.

\land DİKKAT

Üniteyi YIKAMAYIN. Bu, elektrik çarpmasına veya yangına yol açabilir.

♀ NOT

- Ünitenin üzerine herhangi bir nesne veya ekipman KOYMAYIN.
- Ünitenin üzerine OTURMAYIN, TIRMANMAYIN veya AYAĞINIZLA BASMAYIN.

• Üniteler, aşağıdaki sembolle işaretlenmiştir:



Bu, elektrik ve elektronik ürünlerin sınıflandırılmamış evsel atıklarla karıştırılamayacağı anlamına gelir. Sistemi kendiniz sökmeye çalışmayınız: Sistemin sökülmesi, soğutma sıvısının, yağın ve diğer parçaların bakımı yetkili bir kurucu tarafından yapılmalı ve geçerli mevzuatla uyumlu olmalıdır. Ünitelerin bakımı, yeniden kullanım, geri dönüşüm ve kurtarma için özel bir bakım tesisinde yapılmalıdır. Bu ürünün doğru şekilde ortadan kaldırıldığından emin olarak, çevre ve insan sağlığı için muhtemel olumsuz sonuçları önlemeye yardımcı olacaksınız. Daha fazla bilgi için, kurucunuzla veya yerel yetkilinizle iletişime geçin.

2 KULLANICI ARAYÜZÜNE BİR BAKIŞ

2.1 Kablolu kumandanın görünümü



2.2 Durum simgeleri



3 ANA SAYFALARIN KULLANIMI

3.1 Ana sayfalar hakkında

Günlük kullanım amaçlı ayarları okumak ve değiştirmek için ana sayfaları kullanabilirsiniz. Ana sayfalarda ne görebileceğiniz ve yapabileceğiniz, geçerli olduğu durumlarda açıklanmıştır. Sistem düzenine bağlı olarak, aşağıdaki ana sayfalar mümkün olabilir:

- İstenen oda sıcaklığı (ODA)
- Su akış istenen sıcaklığı (ANA)
- ESS deposu asıl sıcaklığı (DEPO)

ESS = evsel sıcak su

Ana sayfa 1:

SU AKIŞ SICAKLIK EVET ve ODA SICAKL. YOK olarak ayarlandıysa sistem, zemin ısıtma ve sıcak su yapma dahil olmak üzere işlevlere sahiptir. Aşağıdaki sayfa görüntülenir:

NOT

Kılavuzdaki tüm resimler açıklamak için kullanılmıştır, ekrandaki asıl sayfalarda bazı farklılıklar olabilir.

01-01-2018 🕂	23:59) ①13°
ໃ≋	AÇIK	گ
∂23 °°	Ŏ.	38 °℃
ī		

Ana sayfa 2:

SU AKIŞ SICAKLIK YOK ve ODA SICAKL. EVET olarak ayarlandıysa sistem, zemin ısıtma ve sıcak su yapma dahil olmak üzere işlevlere sahiptir. Aşağıdaki sayfa görüntülenir:

NOT

Arayüz, oda sıcaklığını kontrol etmek için zemin ısıtma odasına kurulmalıdır.

01-01-2018 🕂	23:59) 介₁₃∘
Ĩ	AÇIK	Ĩ ▲
23,5 ℃	-ờ-	38 °℃
Ĩ		

Ana sayfa 3:

ESS MODU, YOK olarak ayarlandıysa ve "SU AKIŞ SICAKLIK" EVET olarak ayarlandıysa, "ODA SICAKL." EVET olarak ayarlandıysa bir ana sayfa ve ek sayfa olacaktır. Sistem, fanlı ısıtma için zemin ısıtma ve alan soğutma dahil olmak üzere işlevlere sahiptir, ana sayfa 3 görüntülenir:



Ana sayfa 4:

ESS modu EVET olarak ayarlandıysa: Ana sayfa ve ek sayfa olacaktır. Sistem, fanlı ısıtma ve evsel sıcak su için zemin ısıtma, alan soğutma dahil olmak üzere işlevlere sahiptir, ana sayfa 4 görüntülenir:



4 MENÜ YAPISI

4.1 Menü yapısı hakkında

Günlük kullanım amaçlı OLMAYAN ayarları okumak ve yapılandırmak için menü yapısını kullanabilirsiniz. Menü yapısında ne görebileceğiniz ve yapabileceğiniz, geçerli olduğu durumlarda açıklanmıştır.

4.2 Menü yapısına gitmek için

Ana sayfadan " 🗏 " öğesine basın. Sonuç: Menü yapısı görünür:

MENÜ 1/2	MENÜ 2/2
ÇALIŞMA MOD	SERVIS BILGISI
ÖN AYARLI SICAKLIK	ÇALIŞMA PARAMETRESİ
EVSEL SICAK SU (ESS)	SERVİS ÇALIŞANI İÇİN
PLAN	WLAN AYARI
SEÇENEKLER	SN GÖRN
ÇOCUK KİLİDİ	
Giriş 😝	Giriş 🖨

4.3 Menü yapısında gezinmek için

Kaydırmak için "▼", "▲" kullanın.

5 TEMEL KULLANIM

5.1 Ekran Kilidini Açma

Simge 🖰 ekrandaysa kumanda kilitlenebilir. Aşağıdaki sayfa görüntülenir:



Herhangi bir düğmeye bastığınızda simge 🔂 yanıp sönecektir. " 🗃 " tuşuna uzun basın. Simge 🔂 kaybolacaktır, arayüz kontrol edilebilir.



Uzun süre boyunca işlem gerçekleşmezse arayüz kilitlenecektir (yaklaşık 120 saniye) Arayüzün kilidi açıksa " 🖧 " üzerine uzun bastığınızda arayüz kilitlenir.



5.2 Kontrolleri AÇIK/KAPALI konuma getirme

Alan ısıtma veya soğutması için üniteyi açmak ya da kapatmak üzere arayüzü kullanın.

- Ünitenin AÇIK/KAPALI işlevi, ODA TERMOSTAT YOK durumunda olması halinde arayüz tarafından kontrol edilebilir. (Bkz. "Kurulum ve kullanıcı kılavuzu (M-termal bölme iç mekan ünitesi)" içindeki "ODA TERMOSTATI AYARI")
- Ana sayfada "◀", "▲" üzerine bastığınızda siyah imleç görüntülenir:



1) İmleç, alan çalışma modu sıcaklığı tarafındaysa (Isıtma modu 業, soğutma modu - 〇- ve otomatik mod 企 dahil) alan ısıtma veya soğutmasını açmak/kapatmak için "〇" tuşuna basın.







SIC. TÜRÜ, ODA SICAKL. olarak ayarlandıysa aşağıdaki sayfalar görüntülenir:

01-01-2018	23:59	企 13°		01-01-2018	23:59	☆ 13°
꼺	AÇIK	Ĩ Ŝ		5	KAPALI	ı پ پ
23.5°°	-ờ-	38 °℃		23.5°°	X	38 [∘]
	1				·	
	↑			L	 	L
		ſ	ch			
			Jr	Y		
		15				

Alan ısıtma veya soğutması için üniteyi açmak ya da kapatmak üzere oda termostatını kullanın.

① Oda termostatı EVET olarak AYARLANMIŞTIR (bkz. "Kurulum ve kullanıcı kılavuzu (M-termal bölme iç mekan ünitesi)" içindeki "ODA TERMOSTATI AYARI"). Ünite oda termostatı tarafından açılmış veya kapatılmışsa arayüze basın, aşağıdaki sayfa görüntülenir:



② ÇİFT ODA TERMOSTATI, EVET olarak ayarlanmıştır (bkz. "Kurulum ve kullanıcı kılavuzu (M-termal bölme iç mekan ünitesi)" içindeki "ODA TERMOSTATI AYARI"). Fanlı ısıtıcı için oda termostatı kapalı, zemin ısıtması için oda termostatı açık ve ünite çalışıyor ancak ekran KAPALI. Aşağıdaki sayfa görüntülenir:

01-01-2018	23:59	① 13°	01-01-2018 23	3:59 ☆ 13°
E	AÇIK		≥ 2 2	AÇIK
ბ 38 ° ^c	-ờ-	38 °⁻	23 ,5 ^{°°}	-ờ-

01-01-2018	23:59	습13°	01-01-2018 23	:59 ①13°
Ð	KAPALI	≝ €	2 2	KAPALI
∂ 38 °°	-ờ-	38 [∘]	23,5°°	-☆-

ESS için üniteyi açmak ya da kapatmak üzere arayüzü kullanın. Ana sayfada "▶", "▼" öğesine bastığınızda siyah imleç görüntülenir:

01-01-2018	23:59	☆ 13°
ີເ≋	AÇIK	• ĨĨĨ
∂23 °°	-ờ-	38 °℃

2) İmleç, ESS çalışma modundayken. ESS modunu açmak/kapatmak için " ' ' tuşuna basın.

Alan çalışma AÇIK ise aşağıdaki sayfalar görüntülenir:



Alan çalışma modu KAPALI ise aşağıdaki sayfalar görüntülenir:



5.3 Sıcaklığı ayarlama

Ana sayfada "◀", "▲" üzerine bastığınızda siyah imleç görüntülenir:

01-01-2018	23:59	① 13°
∬≋	AÇIK	• ***
۵ <mark>23</mark> °	-ờ-	38 °℃

 İmleç sıcaklığın üzerindeyse seçmek için "," "kullanın ve sıcaklığı ayarlamak için "▼","▲" kullanın.







5.4 Alan çalışma modunu ayarlama

 Arayüz aracılığıyla alan çalışma modunu ayarlama. "目 " > " ÇALIŞMA MOD" kısmına gidin. " → " üzerine basın, aşağıdaki sayfa görüntülenir:

ÇALIŞM	A MOD			
Çalışma	modu ay	arı:		
	ISIT	SOĞ.	ΟΤΟΜΑΤΙΚ	
	-ờ	₩	(A)	
NO 🖵	NAYLA			♪

ISIT, SOĞ. ve OTOMATİK modu içeren seçilecek üç mod vardır. Kaydırmak için
 "◄", "▶" kullanın ve seçmek için " ← " üzerine basın.
 TAMAM düğmesine basmamanız ve ⊃ düğmesine basarak sayfadan çıkmanız
 halinde dahi, imleç çalışma moduna getirildiyse mod hala etkin olur.

Yalnızca ISITMA (SOĞUTMA) modu varsa aşağıdaki sayfa görüntülenir:



 Çalışma modu değiştirilemez, bkz. kurulum ve kullanıcı kılavuzunda soğutma MOD AYARI.

Şunu seçenerseniz:	Alan çalışma modu:
-Ŏ- Isı	Her zaman ısıtma modu
پنج Soğ.	Her zaman soğutma modu
(A) Otomatik	Dış mekan sıcaklığına dayalı olarak (ve iç mekan sıcaklığının kurucu ayarlarına bağlı olarak) yazılım tarafından otomatik olarak değiştirildi ve aylık kısıtlamaları dikkate alır. Not: Otomatik aktarım yalnızca belirli koşullar altında mümkündür. Bkz. "Kurulum ve kullanıcı kılavuzu (M-termal bölme iç mekan ünitesi)" içindeki SERVİS ÇALIŞANI İÇİN > OTOMATİK MOD AYARI.

 Alan çalışma modunu oda termostatı aracılığıyla ayarlayın, bkz. "Kurulum ve kullanıcı kılavuzu (M-termal bölme iç mekan ünitesi). içindeki "ODA TERMOSTAT".

□ > ÇALIŞMA MOD kısmına gidin, seçmek veya ayarlamak için herhangi bir düğmeye basarsanız bu sayfa görüntülenir:



6 Ağ Yapılandırma Kuralları

- Kablolu kumanda, uygulamadan kontrol sinyali alan yerleşik modül ile akıllı kontrolü tanır.
- WLAN'a bağlanmadan önce lütfen ortamınızdaki router'ın aktif olup olmadığını kontrol edin ve kablolu kumandanın kablosuz sinyale uygun biçimde bağlı olduğundan emin olun.
- Kablosuz dağıtım işlemi sırasında "
 " LCD simgesi yanıp sönerek ağın kullanılmakta olduğunu gösterir. İşlem tamamlandıktan sonra, "
 " simgesi sürekli yanık kalır.

6.1 Kablolu Kumanda Ayarı

Kablolu kumanda ayarları, AP MODU ve WLAN AYARI GERİ seçeneklerini içerir.

WLAN AYARI	
AP MODU	
WLAN AYARI GERİ	
Giriş	Ð

- WLAN'ı arayüzden etkinleştirin. " I > "WLAN AYARI" > "AP MODU" kısmına gidin.
 - " ← " üzerine basın, aşağıdaki sayfa görüntülenir:

AP MODU		Ì
WLAN ağını etkinleş çıkış yapmak istiyor ı	tirmek ve musunuz?	
HAYIR	EVET	
CNAYLA		•

"EVET" e gitmek için "◀", "▶" kullanın ve AP modunu seçmek için "←" üzerine basın.

Karşılık olarak mobil cihazda AP Modunu seçin ve UYGULAMA komutlarına göre ayarları izlemeye devam edin.

\land DİKKAT

AP moduna girdikten sonra, cep telefonu ile bağlantılı değilse " 奈 " LCD simgesi 10 saniye yanıp söner ve sonra kaybolur.

Cep telefonu ile bağlantılı ise " 🗢 " simgesi sürekli görüntülenir.

- - "←" üzerine basın, aşağıdaki sayfa görüntülenir:

WLAN AYARI GERİ		
WLAN ayarını geri yi çıkış yapmak istiyor ı	iklemek ve musunuz?	
	l	
HAYIR	EVET	
ONAYLA		<

"EVET" e gitmek için "◀", "▶" kullanın ve WLAN ayarını geri yüklemek için "↓" üzerine basın. Yukarıdaki işlemi tamamlayın ve kablosuz yapılandırma sıfırlanır.

6.2 Mobil Cihaz Ayarı

AP Modu, mobil cihaz tarafında kablosuz dağıtım için kullanılabilir.

- AP Modu WLAN bağlantısı:
- 6.2.1 Uygulamayı yükleme
- (1) Smart Home Uygulamasını yüklemek için aşağıdaki QR kodunu taratın.



⁽²⁾ Uygulamayı yüklemek için APP STORE'da veya GOOGLE PLAY'de "Comfort Home"u aratın.

Bu uygulama, yalnızca Android 7.0 ve IOS7 ya da daha yeni işletim sistemleriyle kullanılabilir.

6.2.2 Oturum Açma/Kaydolma

Lütfen kayıt kodunuzu girin.

Varsa kumanda ambalaji kutusundaki QR kodunu da tarayabilirsiniz. Ayrıca kılavuza göre hesabınızı kaydettirin.





6.2.3 Ev Cihazlarını Ekleme:

1) Kılavuzu izleyerek cihazınızı ekleyin.



2) Kablolu kumandayı uygulama komutlarına göre çalıştırın.



3) Ev cihazlarının bağlanmasını bekleyin, ardından "Tamam" a tıklayın.

ul e	9:28
c	Connect successfully
The AC Device	59E1 has been successfully added
	Sure m

- Cihaz başarıyla bağlandıktan sonra kablolu kumandanın LCD simgesi " "
 sürekli yanar ve ısı pompası, uygulama üzerinden kontrol edilebilir.
- 5) Ağ dağıtım işlemi başarısız olursa veya mobil bağlantı yeniden bağlanma veya değiştirme isteğinde bulunursa kablolu kumandada "WLAN AYARI GERİ" işlemini çalıştırın ve ardından yukarıdaki işlemi yineleyin.




Ağ arızaları için uyarılar ve sorun giderme

Ürün ağa yeniden bağlandığında, lütfen telefonun ürüne mümkün olduğunca yakın bir yerde durduğundan emin olun.

Şu anda yalnızca 2,4 GHz bandındaki router'ları destekliyoruz.

WLAN adında özel karakterler (noktalama, boşluklar vb.) bulunması önerilmez.

.....

Ev cihazlarının zayıf veya kararsız ağ sinyalinden etkilenmemesi için tek bir router'a 10'dan fazla cihaz bağlamamanız önerilir.

.....

Router ya da WLAN parolası değişirse tüm ayarları temizleyin ve cihazı sıfırlayın.

.....

Uygulamanın içeriği, sürüm güncellemelerinde değişebilir ve asıl işlem geçerli olur.

WI-FI bilgileri

WIFI aktarım frekansı aralığı: 2,400 ~ 2,4835 GHz En fazla 20 dbm EIRP

7 KURULUM KILAVUZU

7.1 Güvenlik önlemleri

- Üniteyi kurmadan önce güvenlik önlemlerini dikkatlice okuyun.
- Aşağıda belirtilenler, riayet edilmesi gereken önemli güvenlik konularıdır.
- Tamamlandıktan sonra test işlemi sırasında anormal bir olay olmadığını onaylayın ve ardından, kılavuzu kullanıcıya verin.
- İşaretlerin anlamı:

\land UYARI

Yanlış bir hareketin kişinin ölümüne veya ağır yaralanmasına yol açabileceği anlamına gelir.

\land DİKKAT

Yanlış bir hareketin kişinin yaralanmasına veya mal kaybına yol açabileceği anlamına gelir.

\land UYARI

Kurulması için üniteyi lütfen distribütöre veya uzmanlara emanet edin. Başka kişiler tarafından yapılan kurulumlar, hatalı kuruluma, elektrik çarpmasına veya yangına yol açabilir.

Bu kılavuza tamamıyla uyun.

Yanlış kurulum, elektrik çarpmasına veya yangına yol açabilir.

Yeniden kurulum, uzmanlar tarafından gerçekleştirilmelidir.

Yanlış kurulum, elektrik çarpmasına veya yangına yol açabilir.

.....

lsı pompanızı istediğiniz zaman sökmeyin.

Rastgele bir sökme işlemi, yangına yol açabilecek anormal çalışmaya veya ısınmaya neden olabilir.

\land DİKKAT

Üniteyi, yanıcı gaz kaçağına maruz kalabileceği bir yere kurmayın.

Yanıcı gaz kaçağının olması ve bu gazların kablolu kumandanın çevresinde kalması halinde yangın çıkabilir.

Kablolama, kablolu kumanda akımına uygun olmalıdır.

Aksi halde, elektrik kaçağı veya ısınma meydana gelebilir ve yangın çıkabilir.

.....

Kablolamaya belirtilen teller uygulanmalıdır. Terminale harici kuvvet uygulanamaz.

Aksi halde, kablo kopması ve ısınması meydana gelebilir ve yangın çıkabilir.

.....

Kumandanın uzaktan sinyallerinin kesintiye uğramaması için, kablolu uzaktan kumandayı lambaların yakınına koymayın. (sağdaki şekle bakın)



7.2 Diğer Önlemler

7.2.1 Kurulum konumu

Üniteyi fazla yağlı, buharlı, sülfit gazlı bir yere kurmayın. Aksi halde, ürün deforme olup arızalanabilir.

7.2.2 Kurulum öncesi hazırlık

1) Aşağıdaki montaj elemanlarının eksiksiz olup olmadığını kontrol edin.

No.	Ad	Adet	Notlar
1	Kablolu Kumanda	1	
2	Çapraz yuvarlak başlı ahşap montaj vidası	3	Duvara Montaj İçin
3	Çapraz yuvarlak başlı montaj vidası	2	Elektrik Dağıtım Kutusuna Montaj İçin
4	Kurulum ve Kullanıcı Kılavuzu	1	
5	Plastik cıvata	2	Bu aksesuar, merkezi kumanda, elektrik panosunun içine takıldığında kullanılır.
6	Plastik genleşme borusu	3	Duvara montaj için

7.2.3 Kablolu kumandanın takılmasıyla ilgili not:

1) Bu kurulum kılavuzu, Kablolu Uzaktan Kumandanın kurulum prosedürü hakkında bilgiler içerir. Kablolu Uzaktan Kumanda ve İç Mekan Ünitesi arasındaki bağlantı için, lütfen İç Mekan Ünitesi Kurulum Kılavuzuna başvurun.

2) Kablolu Uzaktan Kumandanın devresi, düşük gerilimli devredir. Bunu asla standart bir 220 V / 380 V devreyle bağlamayın veya devreyle aynı Kablo Kanalı içerisine koymayın.

3) Blendajlı kablo, toprağa stabil şekilde bağlanmalıdır; aksi halde aktarım başarısız olabilir.

4) Blendajlı kabloyu keserek uzatmaya çalışmayın; gerekirse bağlamak için Terminal Bağlantısı Bloğu kullanın. 5) Bağlantıyı bitirdikten sonra, sinyal kablosunun yalıtım kontrolü için Meger Cihazı kullanmayın.

7.3 Kurulum prosedürü ve kablolu kumandayla uyumlu ayar

7.3.1 Yapı boyut şekli



7.3.2 Kablolama

Giriş gerilimi (A/B)	13,5 VAC
Kablo boyutu	0,75 mm ²



7.3.3 Arka kapağın takılması





1) Flambaj konumunu kablolu kumandanın altına doğru takmak için düz başlı tornavida kullanın ve arka kapağı sökmek için tornavidayı döndürün. (Döndürme yönüne dikkat edin, aksi halde arka kapak zarar görebilir!)

2) Arka kapağı doğrudan duvara takmak için üç adet M4X20 vida kullanın.

3) Arka kapağı 86 elektrik kutusuna takmak için, iki adet M4X25 vida kullanın ve duvara sabitlemek için de bir M4X20 vida kullanın.

4) Aksesuar içindeki iki plastik vidalı çubuğun uzunluğunu, elektrik kutusu vidalı çubuğundan duvara standart uzunlukta olacak şekilde ayarlayın. Vidalı çubuğu duvara takarken duvar kadar düz olduğundan emin olun.

5) Kablolu kumandanın alt kapağını duvardaki vidalı çubuk üzerinden sabitlemek için çapraz başlı vidalar kullanın. Kablolu kumandanın alt kapağının kurulumdan sonra aynı seviyede olduğundan emin olun ve ardından, kablolu kumandayı tekrar alt kapağa takın.

6) Vidayı aşırı sıkmak, arka kapağın deforme olmasına yol açar.





Kablolu uzaktan kumandaya su girmesini engelleyin; kablo tesisati kurulumu sırasında kablo bağlantı elemanlarının sızdırmazlığını sağlamak için macun ve kapan kullanın.

7.4 Ön kapağın takılması

Ön kapağı ayarladıktan sonra tokalarından takın; takma sırasında iletişim alışverişi kablosunu sıkıştırmaktan kaçının.



Arka kapağı doğru şekilde takın ve ön kapağı ve arka kapağı sıkıca tokalarından takın; aksi halde ön kapak düşer.



8 MODBUS EŞLEME TABLOSU

8.1 Modbus port iletişim teknik özellikleri

Port: Port: RS-485; kablolu kumanda XYE, hidrolik modül bağlantısı için iletişim portudur. H1 ve H2, Modbus iletişim portlarıdır. İletişim adresi: Hidrolik modülün DIP anahtarı adresiyle uyumludur.

Baud hızı: 9600 Basamak sayısı: Sekiz Doğrulama: yok Durdurma Biti: 1 bit İletişim protokolü: Modbus RTU (Modbus ASCII desteklenmemektedir)

8.1.1 Kablolu kumandadaki kayıtların eşlenmesi

Aşağıdaki adresler; 03H, 06H (tek kayıt yazma), 10H (çoklu kayıt yazma) kullanabilir.

Kayıt adresi	Açıklama	Notlar	
0	Güc acık veva	BIT15	Ayrılmış
(PLC:40001)	(PLC:40001) kapalı.	BIT14	Ayrılmış
		BIT13	Ayrılmış
		BIT12	Ayrılmış
		BIT11	Ayrılmış
		BIT10	Ayrılmış
		BIT9	Ayrılmış
		BIT8	Ayrılmış
		BIT7	Ayrılmış
		BIT6	Ayrılmış
		BIT5	Ayrılmış
		BIT4	Ayrılmış
		BIT3	0: zemin ısıtma gücü kapalı; 1: zemin ısıtma gücü açık; (bölge 2) (su akışı sıcaklığı kontrolü)
		BIT2	0: ESS (T5S) gücü kapalı; 1: ESS (T5S) gücü açık
		BIT1	0: zemin ısıtma gücü kapalı; 1: zemin ısıtma gücü açık; (bölge 1) (su akışı sıcaklığı kontrolü)
		BIT0	0: klima gücü kapalı; 1: klima gücü açık; (bölge 1) (oda sıcaklığı kontrolü)

1 (PLC: 40002)	Modu ayarlama	1: Otomatik;	; 2: Soğutma; 3: Isıtma; Diğerleri: Geçersiz		
2 (PL C: 40002)	T1S su sıcaklığını ayarlama	Bit8-Bit15	Su sıcaklığı T1s, zemin ısıtmasına karşılık gelir. (bölge 2)		
2 (FLC: 40003)		Bit0-Bit7	Su sıcaklığı T1s, zemin ısıtmasına karşılık gelir. (bölge 1)		
3 (PLC: 40004)	Ts hava sıcaklığını ayarlama	Oda sıcaklığı değer*2	Oda sıcaklığı aralığı 17 °C ila 30 °C'dir ve Ta bulunduğu zaman geçerli olur. Protokol değeri=asıl değer*2		
4 (PLC: 40005)	T5s	Su deposu si	Su deposu sıcaklık aralığı, 20 °C ila 60 °C'dir.		
		B I T15	Ayrılmış		
		BIT14	Ayrılmış		
		BIT13	1: klima eğrisi ayarlama geçerli; 0: klima eğrisi ayarlama geçersiz. (bölge2)		
		BIT12	1: klima eğrisi ayarlama geçerli; 0: klima eğrisi ayarlama geçersiz. (bölge1)		
		BIT11	ESS pompasının çalışan sabit sıcaklıklı su geri dönüştürmesi		
		BIT10	EKO modu		
	işlev Ayan	BIT9	Ayrılmış		
5 (PLC: 40006)		BIT8	Tatilde evde (durum yalnızca okunabilir, değiştirilemez)		
		BIT7	0: Sessiz mod seviyesi1; 1: Sessiz mod seviyesi2		
		BIT6	Sessiz mod		
		BIT5	Tatilde uzakta (durum yalnızca okunabilir, ancak değiştirilemez)		
		BIT4	Dezenfekte et		
		BIT3	Ayrılmış		
		BIT2	Ayrılmış		
		BIT1	Ayrılmış		
		BIT0	Ayrılmış		
5 (PL C: 40007)	Eğri seçimi	Bit8-Bit15	Klima Eğrisi 1-9 (bölge 2)		
(122.10007)		Bit0-Bit7	Klima Eğrisi 1-9 (bölge 1)		
7 (PLC: 40008)	Zorlamalı su ısıtma	0: Geçersiz 1: Zorlamalı acma	TBH, elektrikli su deposu ısıtıcısıdır. IBH1 ve 2, hidrolik modülün arka elektrik ısıtıcılarıdır. IBH1 ve 2 ibilitte atkingetriklekilir.		
3 (PLC: 40009)	Zorlamalı TBH	2: Zorlamalı kapatma	TBH; IBH1 ve IBH2 ile birlikte etkinleştirilemez.		
9 (PLC: 40010)	Zorlamalı IBH1	napatria			
I0 (PLC: 40011)	t_SG_MAX		0 - 24 Saat		
11 (PLC: 40012)	TIS	Su sıcaklığı T1S, zemin ısıtmasına karşılık gelir. (bölge 1)			
12 (PLC: 40013)	TIS	Su sıcaklığı T1S, zemin ısıtmasına karşılık gelir. (bölge 2)			
13 (PLC: 40014)	t_ANTILOCK	Varsayılan ayar: 5, aralık: 0~60 S (Sphera A'da mevcut)			
Jikan su sıcaklığı T1s soğutma modunda, sıtma modunda. T1s	s ayar aralığı talimatı: T1S düşük sıcaklık ayar aralığı 5 ila 5 düsük sıcaklık ayar aralığı 25 ila 5!	25 °C'dir; T1S yü 5 °C'dir; T1S yüks	ksek sıcaklık ayar aralığı 18 ila 25 °C'dir. ek sıcaklık ayar aralığı 35 ila 65 °C'dir.		

8.1.2 Kablolu kumanda, hidrolik modüle bağlı olduğunda, tüm ünitenin parametreleri kontrol edilebilir:

Aşağıdaki adres tablosu yalnızca 03H işlev kodunu (Kayıt okuma) kullanabilir. *Tüm ünite parametre eşleme adresi tablosu*

1) Çalışma parametreleri				
Kayıt adresi	Açıklama	Notlar		
100(PLC: 40101)	Çalışma frekansı	Hz cinsinden kompresör çalışma frekansı		
101(PLC: 40102)	Çalışma Modu	Dış ünitenin geçerli çalışma modu, 2: soğutma, 3: ısıtma, 0: kapalı		
102(PLC: 40103)	Fan Hızı	dev/dk. cinsinden fan hızı		
103(PLC: 40104)	PMV açıklığı	Dış mekan ünitesinin elektronik genleşme vanasının P biriminden açıklığı		
104(PLC: 40105)	Su giriş sıcaklığı	TW_in, birim: °C		
105(PLC: 40106)	Su çıkış sıcaklığı	TW_out, birim: ℃		
106(PLC: 40107)	T3 Sıcaklığı	Kondansör sıcaklığı, birim: °C		
107(PLC: 40108)	T4 Sıcaklığı	Dış ortam sıcaklığı birimi: °C		
108(PLC: 40109)	Boşaltma sıcaklığı	Kompresör boşaltma sıcaklığı Tp birimi: °C		
109(PLC: 40110)	Emme sıcaklığı	Kompresör emme sıcaklığı Th, birim: °C		
110(PLC: 40111)	T1	Sistem toplam su çıkış sıcaklığı (yardımcı ısıtıcının arkasında), birim: °C		
111(PLC: 40112)	Tw2	Bölge 2 su akışı sıcaklığı, birim: °C		
112(PLC: 40113)	T2	Soğutma sıvısı tarafı sıcaklığı, birim: °C		
113(PLC: 40114)	T2B	Soğutma gazı tarafı sıcaklığı, birim: °C		
114(PLC: 40115)	Та	Oda sıcaklığı, birim: °C		
115(PLC: 40116)	T5	Su deposu sıcaklığı, birim: °C		
116(PLC: 40117)	Basınç 1	Dış mekan ünitesi yüksek basınç değeri, birim: kPa		
117(PLC: 40118)	Basınç 2	Dış mekan ünitesi düşük basınç değeri, birim: kPa		
118(PLC: 40119)	Dış mekan ünitesi akımı	Dış mekan ünitesi çalışma akımı, birim: A		
119(PLC: 40120)	Dış mekan ünitesi gerilimi	Dış mekan ünitesi gerilimi, birim: V		
120(PLC: 40121)	Tbt1	Tbt1, birim: ℃		
121(PLC: 40122)	Tbt2	Tbt2, birim: °C		
122(PLC: 40123)	Kompresör çalışma süresi	Saat cinsinden kompresör çalışma süresi		
123(PLC: 40124)	Ünite kapasitesi	200 kayıt için 0 702 ayrılmış. 071x olduğunda, veri 4-30, 4-30 kW anlamına gelir		
124(PLC: 40125)	Geçerli arıza	Ayrıntılı hata kodları için kod tablosuna bakın		
125(PLC: 40126)	Arıza 1			
126(PLC: 40127)	Arıza 2	Ayrıntılı hata kodları için kod tablosuna bakın.		
127(PLC: 40128)	Arıza 3			

		BIT15	Çalışma parametresi gönderme talebi, 1:
		BIT14	Yazılım sürümü gönderme talebi, 1: talen: 0: talen yok
		BIT13	SN kodu gönderme talebi, 1: talep: 0: talep vok
		BIT12	Ayrılmış
		BIT11	EUV 1: ücretsiz elektrik; 0: SG'nin sinyaline göre değerlendirme
		B I T10	SG 1: normal elektrik; 0: yüksek ücretli elektrik (EUV 0 olduğunda değerlendirme)
		BIT9	Su deposu için antifriz işlemi
128 (PLC: 40129)	Durum biti 1	BIT8	Güneş enerjisi sinyal girişi
		BIT7	Oda termostatı tarafından ayarlanan soğutma modu
		BIT6	Oda termostatı tarafından ayarlanan ısıtma modu
		BIT5	Dış mekan ünitesi test modu işareti
		BIT4	Uzaktan Açma/Kapatma (1: d8)
		BIT3	Yağ dönüşü
		BIT2	Antifriz
		BIT1	Buz çözme
		BIT0	Ayrılmış
		BIT15	BUZ ÇÖZME
		BIT14	Ek ısıtma kaynağı
		BIT13	ÇLŞ
		BIT12	ALARM
		BIT11	Solar su pompası
		BIT10	ISIT4
		BIT9	SV3
120 (DL C. 40120)	Vük edue	BIT8	Karışık su pompası P_c
129 (PLC: 40150)	YUK ÇIKIŞI	BIT7	Su dönüş suyu P_d
		BIT6	Dış su pompası P_o
		BIT5	SV2
		BIT4	SV1
		BIT3	Su pompası PUMP_I
		BIT2	Elektrikli ısıtıcı TBH
		BIT1	Elektrikli ısıtıcı IBH2
		BIT0	Elektrikli ısıtıcı IBH1
130 (PLC: 40131)	Yazılım sürümü	Hidrolik	modülün yazılım sürümü 1~99'dur
131 (PLC: 40132)	Kablolu kumanda model No.	1~99, k	ablolu kumandanın model numarasıdır.

132(PLC: 40133)	Ünite hedef frekansı	Hz			
133(PLC: 40134)	DC veri yolu akımı	Birim: A			
134(PLC: 40135)	DC veri yolu gerilimi	Asıl değer/1	I0, birim: V		
135(PLC: 40136)	TF modülü sıcaklığı	Dış mekan ü	ünitesi hakkında geri bildirim, birim: °C		
136(PLC: 40137)	Klima eğrisi T1S hesaplanan değeri 1	Bölge 1'in il	Bölge 1'in ilgili hesaplanmış T1S değeri		
137(PLC: 40138)	Klima eğrisi T1S hesaplanan değeri 2	Bölge 2'nin	ilgili hesaplanmış T1S değeri		
138(PLC: 40139)	Su akışı	Asıl değer*1	100, birim: m3/sa.		
139(PLC: 40140)	PLC: 40140) Dış mekan ünitesinin limit şeması		ri		
140(PLC: 40141)	: 40141) Hidrolik modül kabiliyeti		100, birim: kW		
141(PLC: 40142)	Tsolar	Tsolar			
142(PLC: 40143)	Paralel bağlanan ünitelerin miktarı	BIT1-BIT15	Sırasıyla 1-15 bağımlı ünitelerinin çevrimiçi durumunu temsil eder		
		BITO	Ayrılmış		
143(PLC: 40144)	Elektrik tüketimi için daha yüksek bitler				
144(PLC: 40145)	Elektrik tüketimi için daha düşük bitler				
145(PLC: 40146)	Güç çıkışı için daha yüksek bitler				
146(PLC: 40147)	Güç çıkışı için daha düşük bitler				

Not:

1. Tw2 kullanılamaz olduğunda, 113 adresli üst ünitede "25" görüntülenir.

2. T2B kullanılamaz olduğunda, kablolu kumandada "--" ve 113 adresli üst ünitede "25" görüntülenir.

3. Ta kullanılamaz olduğunda, 114 adresli üst ünitede "25" görüntülenir.

4. Tbt1, Tbt2 olmadan E serisinde, kablolu kumandada "--" ve 120 ve 121 adresli üst ünitede "0" görüntülenir. Kayıt adresi 200-208, yalnızca 03H (Kayıt okuma) işlev kodunu kullanabilir. Kayıt adresi 209 ve sonrası 03H, 06H (tek kayıt yazma), 10H (çoklu kayıt yazma) kullanabilir.

2) Parametre ayarı			
Kayıt adresi	Açıklama	Notlar	
200(PLC: 40201)	Beyaz eşya tipi	Daha yüksek 8 bitler ev cihazları türleridir: Havadan sıya sı pompas: 000 Ortadaki 4 bitler ürün kodlarıdır: 0x1* Daha düşük 4 bitler alt türdür: R32: 0x*2	
201(PLC: 40202)	T1S soğutmasının sıcaklık üst sınırı	Daha düşük 8 bitler, bölge 1 içindir. Daha yüksek 8 bitler, bölge 2 içindir	
202(PLC: 40203)	T1S soğutmasının sıcaklık alt sınırı	Daha düşük 8 bitler, bölge 1 içindir. Daha yüksek 8 bitler, bölge 2 içinc	
203(PLC: 40204)	T1S ısıtmasının sıcaklık üst sınırı	Daha düşük 8 bitler, bölge 1 içindir. Daha yüksek 8 bitler, bölge 2 içinc	
204(PLC: 40205)	T1S ısıtmasının sıcaklık alt sınırı	Daha düşük 8 bitler, bölge 1 içindir. Daha yüksek 8 bitler, bölge 2 içinc	
205(PLC: 40206)	TS ayarının sıcaklık üst sınırı	Protokol değeri = gerçek değer * 2	
206(PLC: 40207)	TS ayarının sıcaklık alt sınırı	Protokol değeri = gerçek değer * 2	
207(PLC: 40208)	Su ısıtmasının sıcaklık üst sınırı		
208(PLC: 40209)	Su ısıtmasının sıcaklık alt sınırı		
209(PLC: 40210)	POMPA ÇALIŞMA SÜRESİ	ESS POMPA su dönüşü çalışma süresi. Varsayılan olarak beş dakikadı ve 1 dakikalık aralıklarla 5 ile 120 dk. arasında ayarlanabilir.	
210 (PLC: 40211)	Parametre ayan 1	BIT15 Su istmasini etkinleştirme BIT14 TBH su deposu elektrikli isticisini destekler (Salt Okunur) BIT13 Dezenfekte etm işlemini destekler BIT12 ESS POMPA, 1: destekleniyor; 0: destekleniyor BIT10 Dezenfekte etme modunda ESS pompasi geçerli BIT0 Dezenfekte etme modunda ESS pompasi geçerli BIT0 Dezenfekte etme modunda ESS pompasi geçerli BIT0 Dezenfekte etme modunda ESS pompasi geçerli BIT0 Dezenfekte etme modunda ESS pompasi geçerli BIT0 Dezenfekte etme modunda ESS pompasi geçerli BIT0 Dezenfekte etme modunda ESS pompasi geçerli BIT0 Dezenfekte etme modunda ESS pompasi geçerli BIT1 Sistmay icklerekte etme modunda ESS pompasi geçerli BIT15 Istimay icklerekte i geçerli geçerli BIT6 POMPN I sessiz mod. 1: geçerli 0: geçersiz BIT4 Oda istemistati destekler BIT3 Oda iermostati, 0: desteklemiyor; 1: destekleniyor BIT0 De. oda sodurtma/sitma öncelikli 1: su istma öncelikli	

		BIT15	ACS (Çift su deposu kontrolü)		
			1: EVet 0: Hayir (salt okunur)		
		BIT14	AHS kontrol 1 için M1M2 kullanılır: Evet 0: Hayır		
		BIT13	RT_Ta_PCNEn (Sıcaklık Toplama Kiti etkinleştirme) 1: Evet 0: Hayır		
		BIT12	Tbt2 sensörü geçerli 1: Evet 0: Hayır		
		BIT11	Boru uzunluğu seçimi 1: >10 m 0: <10 m		
		BIT10	Güneş enerjisi giriş bağlantı noktası 1: CN18 0: CN11		
011/DL 0: 40040)	Demonstration and an	BIT9	Güneş enerjisi kiti etkinleştirme 1: Evet 0: Hayır		
211(PLC: 40212)	Parametre ayari 2	BIT8	Portu tanımlama, 0=uzaktan AÇIK/KAPALI, 1=ESS ısıtıcısı		
		BIT7	Akıllı şebeke, 0=YOK; 1=EVET		
		BIT6	Tw2 sensörü etkinleştirme 0: Yok 1: Evet		
		BIT5	Bölge 2 için soğutma yüksek/düşük sıcaklık ayarı T1S2 (salt okunur)		
		BIT4	Bölge 2 için ısıtma yüksek/düşük sıcaklık ayarı T1S2 (salt okunur)		
		BIT3	Çift bölge ayarı geçerli		
		BIT2	Ta sensörü konumu 1: IDU 0: HMI		
		BIT1	Tbt1 sensörü etkinleştirme1: Evet 0: Hayır		
		BIT0	IBH/AHS kurulum konumu 1: gaz deposu 0: boru		
212(PLC: 40213)	dT5_On	Varsavılan avar: 10 °C, aralık: 1~30 °C;			
213(PLC: 40214)	dT1S5	Varsayı	lan ayar: 10 °C, aralık: 5~40 °C, ayar aralığı: 1°		
214(PLC: 40215)	T_Interval_DHW	Varsayı	lan ayar: 5 dk., aralık: 5~5 dk., ayar aralığı: 1 dk.		
215(PLC: 40216)	T4DHWmax	Varsayı	lan ayar: 43 °C, aralık: 35~43 °C, ayar aralığı: 1 °C		
216(PLC: 40217)	T4DHWmin	Varsayı	lan: -10 °C, aralık: -25~30 °C;		
217(PLC: 40218)	t_TBH_delay	Varsayı	lan ayar: 30 dk., aralık: 0~240 dk., ayar aralığı: 5 dk.		
218(PLC: 40219)	dT5S_TBH_off	Varsayı	lan ayar: 5 °C, aralık: 0~10 °C, ayar aralığı: 1 °C		
219(PLC: 40220)	T4_TBH_on	Varsayı	lan ayar: 5 °C, aralık: -5∼50 °C;		
220(PLC: 40221)	T5s_DI	Dezenfekte etme işlemi için sıcaklık, aralık: 60~70 °C, varsayılan ayar: 65 °C			

221(PLC: 40222)	t_DI_max	Maksimum dezenfekte etme süresi, aralık: 90~300 dk., varsayılan ayar: 210 dk.
222(PLC: 40223)	t_DI_hightemp	Dezenfekte etme yüksek sıcaklık süresi, aralık: 5~60 dk., varsayılan ayar: 15 dk.
223(PLC: 40224)	t_interval_C	Soğutma modunda kompresörü başlatma zaman aralığı; aralık: 5~5 dk., varsayılan ayar: 5 dk.
224(PLC: 40225)	dT1SC	Varsayılan ayar: 5 °C, aralık: 2~10 °C, ayar aralığı: 1 °C
225(PLC: 40226)	dTSC	Varsayılan ayar: 2 °C, aralık: 1~10 °C, ayar aralığı: 1 °C
226(PLC: 40227)	T4cmax	Varsayılan ayar: 52 °C, aralık: 35~52 °C, ayar aralığı: 1 °C
227(PLC: 40228)	T4cmin	Varsayılan ayar: 10 °C, aralık: -5~25 °C, ayar aralığı: 1 °C
228(PLC: 40229)	t_interval_H	lsıtma modunda kompresörü başlatma zaman aralığı; aralık: 5~5 dk., varsayılan ayar: 5 dk.
229(PLC: 40230)	dT1SH	Varsayılan ayar: 5 °C, aralık: 2-20 °C;
230(PLC: 40231)	dTSH	Varsayılan ayar: 2 °C, aralık: 1∼10 °C, ayar aralığı: 1 °C
231(PLC: 40232)	T4hmax	Varsayılan ayar: 25 °C, aralık: 20~35 °C, ayar aralığı: 1 °C
232(PLC: 40233)	T4hmin	Varsayılan ayar: -15 °C, aralık: -25-30 °C, Ayar aralığı: 1 °C
233(PLC: 40234)	T4_IBH_on	Hidrolik modül yardımcı elektrik ısıtması IBH'nin etkinleştirilmesi için ortam sıcaklığı, aralık: -15~10 °C, varsayılan ayar: -5 °C
234(PLC: 40235)	dT1_IBH_on	Hidrolik modül yardımcısının etkinleştirilmesi için sıcaklık dönüş farkı, aralık: 2∼10 °C, varsayılan ayar: 5 °C
235(PLC: 40236)	t_IBH_delay	Hidrolik modül yardımcı elektrik ısıtması IBH'nin etkinleştirilmesindeki gecikme süresi, aralık: 15~120 dk., varsayılan ayar: 30 dk.
237(PLC: 40238)	T4_AHS_on	AHS'nin açılması için tetikleyici dış hava sıcaklığı aralık: -15~30 °C, varsayılan ayar: -5 °C
238(PLC: 40239)	dT1_AHS_on	lsı pompasından çıkan suyun ayarlanan sıcaklığı (T1S) ve ısı arasındaki sıcaklık farkı, aralık: 2~20 °C, varsayılan ayar: 5 °C
240(PLC: 40241)	t_AHS_delay	Harici ısıtıcı AHS'nin etkinleştirilmesindeki gecikme süresi, aralık: 5~120 dk., varsayılan ayar: 30 dk.

t_DHWHP_max	lsı pompası ile en uzun su ısıtma süresi, aralık: 10~600 dk., varsayılan ayar: 90 dk.;
t_DHWHP_restrict	lsı pompası ile sınırlı su ısıtma süresi, aralık: 10~600 dk., varsayılan ayar: 30 dk.;
T4autocmin	Varsayılan ayar: 25 °C, aralık: 20~29 °C, ayar aralığı: 1 °C
T4autohmax	Varsayılan ayar: 17 °C, aralık: 10~17 °C, ayar aralığı: 1 °C
T1S_H.A_H	Varsayılan ayar: 25 °C, aralık: 20~25 °C, ayar aralığı: 1 °C
T5S_H.A_DHW	Tatil modunda, su ısıtma modundaki T1 ayarı, aralık: 20~25 ℃, varsayılan ayar: 25 ℃
PER_START oranı	Aralık 10-100, varsayılan ayar10.Ayar aralığı10
SÜRE_AYRI	Aralık 1-60 varsayılan ayar5
dTbt2	Aralık 0-50 varsayılan ayar15
IBH1 gücü	Aralık 0-200 , varsayılan ayar0, birim: 100 W
IBH2 gücü	Aralık 0-200 , varsayılan ayar0, birim: 100 W
TBH gücü	Aralık 0-200, varsayılan ayar0, birim: 100 W
Konfor parametresi	Ayrılmış, bu kayıt sorgulandığında yanlış adres bildirildi
Konfor parametresi	Ayrılmış, bu kayıt sorgulandığında yanlış adres bildirildi
t_DRYUP	Sıcaklık artış günü sayısı, aralık: 4~15 gün, varsayılan ayar: 8 gün
t_HIGHPEAK	Kuruma günü sayısı, aralık: 3~7 gün, varsayılan ayar: 5 gün
t_DRYD	Sıcaklık düşüş günü sayısı, aralık: 4~15 gün, varsayılan ayar: 5 gün
T_DRYPEAK	En yüksek kuruma sıcaklığı, aralık: 30~55°C, varsayılan ayar: 45 °C
t_firstFH	Zemin ısıtmanın ilk çalışma süresi, varsayılan ayar: 72 saat, aralık: 48-96 sa.
T1S (ilk zemin ısıtma)	İlk zemin ısıtmanın T1S'si, aralık: 25~35 °C, varsayılan ayar: 25 °C
	t_DHWHP_max t_DHWHP_restrict T4autocmin T4autohmax T1S_H.A_H T5S_H.A_DHW PER_START oranı SÜRE_AYRI dTbt2 IBH1 gücü IBH2 gücü TBH gücü Konfor parametresi t_DRYUP t_HIGHPEAK t_DRYD T_DRYPEAK t_firstFH T1S (ilk zemin ısıtma)

261(PLC: 40262)	T1SetC1	Soğutma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: 5~25 ℃, varsayılan ayar: 10 ℃
262(PLC: 40263)	T1SetC2	Soğutma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: 5~25 °C, varsayılan ayar: 16 °C
263(PLC: 40264)	T4C1	Soğutma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: (-5) ~46 °C, varsayılan ayar: 35 °C
264(PLC: 40265)	T4C2	Soğutma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: (-5) ~46 °C, varsayılan ayar: 25 °C
265(PLC: 40266)	T1SetH1	lsıtma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: 25~65 °C, varsayılan ayar: 35 °C
266(PLC: 40267)	T1SetH2	lsıtma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: 25~65 °C, varsayılan ayar: 28 °C
267(PLC: 40268)	T4H1	lsıtma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: (-25) ~35 °C, varsayılan ayar: -5 °C
268(PLC: 40269)	T4H2	lsıtma modu için dokuzuncu sıcaklık eğrilerinin parametresi, aralık: (-25) ~35 °C, varsayılan ayar: 7 °C
269(PLC: 40270)	GÜÇ GİRİŞİ SINIRI	Güç giriş sınırı türü, 0=YOK, 1~8=tür 1~8, varsayılan: 0
070/0 1 0 10074)	HB: t_T4_FRESH_C	Aralık: 0,5~6 saat, ayar aralığı: 0,5 saat, gönderme değeri=asıl değer*2
270(P LC: 40271)	LB: t_T4_FRESH_H	Aralık: 0,5~6 saat, ayar aralığı: 0,5 saat, gönderme değeri=asıl değer*2
271(PLC: 40272)	T_PUMPI_DELAY	Aralık: 0,5~20 saat, ayar aralığı: 0,5 saat, gönderme değeri=asıl değer*2
	EMİSYON TÜRÜ	Bit12-15: Soğutma modu için bölge 2 sonunun türü
272(PLC: 40273)		Bit8-11: Soğutma modu için bölge 1 sonunun türü
2.2(, 23. 40210)		Bit4-7: Isıtma modu için bölge 2 sonunun türü
		Bit0-3: Isıtma modu için bölge 1 sonunun türü

8.1.3 Hata kodu

Birim	Kayıt adresi	İçerik	Notlar
E0	1	Su akışı arızası (E8, 3 kez görüntülendi)	
E1	2	Faz kaybı veya nötr kablo ve akım taşıyan kablo bağlanmış	Yalnızca 3 fazlı modeller için geçerlidir
E2	3	Kumanda ve hidrolik arasında iletişim arızası	
E3	4	Son çıkış suyu sıc. sensörü (T1) arızası	Sensör T1
E4	5	Su deposu sıc. sensörü (T5) arızası	Sensör T5
E5	6	Kondansör soğutma gazı çıkış sıcaklığı sensörü (T3)	Sensör T3
E6	7	Ortam sıcaklığı sensörü (T4) arızası	Sensör T4
E7	8	Gaz deposu ön sıc. sensörü (Tbt1) arızası	Sensör Tbt1
E8	9	Su akış arızası	
E9	10	Kompresör emme sıc. sensörü (Th) arızası	Sensör Th
EA	11	Kompresör boşaltma sıc. sensörü (Tp) arızası	Sensör Tp
Eb	12	Güneş enerjisi sıc. sensörü (Tsolar) arızası	
Ec	13	Denge deposu düşük sıc. sensörü (Tbt2) arızası	Sensör Tbt2
Ed	14	Plakalı eşanjör su giriş sıc. sensörü (Tw_in) arızası	Sensör Tw_in
EE	15	Hidrolik modül ana kumanda kartı EEPROM	
P0	20	Düşük basınç koruması	
P1	21	Yüksek basınç koruması	
P3	23	Kompresör fazla akım koruması	
P4	24	Kompresör boşaltma sıc. çok yüksek koruma	
Dr	25	Plaka ısı eşanjörü su girişi ve su çıkışı arasındaki yüksek	
22	25	sıcaklık farkı koruması	
P6	26	Envertör modülü koruması	L0, L1, L2, L4, L5, L7, L8 veya L9 gerçekleştiğinde kullanıcı arayüzünde görüntülenir
Pb	31	Antifriz mod koruması	
۲u	22	Kondansör soğutma gazı çıkış sıcaklığı yüksek sıcaklık	
Ра	22	koruması	
PP	38	lsı modundaki su giriş sıcaklığı, su çıkış sıcaklığından daha yüksektir	
HO	39	Hidrolik modül ana kumanda kartı ve ana kumanda kartı PCB B arasında iletişim arızası	
H1	40	Envertör modülü PCB A ve ana kumanda kartı PCB B arasında iletişim arızası	
H2	41	Plakalı eşanjör soğutma gazı çıkışı (sıvı borusu) sıc. sensörü (T2) arızası	Sensör T2
Н3	42	Plakalı eşanjör soğutma gazı çıkışı (gaz borusu) sıc. sensörü (T2B) arızası	Sensör T2B
H4	43	Üç kez L0/L1 koruması	
H5	44	Oda sıc. sensörü (Ta) arızası	Sensör Ta
H6	45	DC fan motoru arızası	
H7	46	Ana devre gerilimi koruma arızası	

Birim	Kayıt adresi	İçerik	Notlar
H8	47	Basınç sensörü arızası	
H9	48	Bölge 2 su akış sensörü (Tw2) arızası	Sensör TW2
HA	49	Plakalı ısı eşanjörü su çıkışı sıcaklık sensörü (Tw_out) arızası	Sensör Tw_out
Hb	50	3 kat PP koruma ve Tw_out<7 °C	
Hd	52	Yönetici ünite ve bağımlı ünite arasında iletişim arızası (paralel)	
HE	53	Hidrolik modül ana kartı ve TA/oda termostat aktarım PCB'si arasında iletişim arızası	
HF	54	Envertör modülü paneli EE PROM arızası	
HH	55	H6, 120 dakika içinde 10 kez görüntülendi	
HP	57	Düşük basınç koruması (Pe<0,6) soğutma modunda 1 saat içinde 3 kez meydana geldi	
C7	65	Envertör modülünün yüksek sıc. koruması	
bH	112	PED PCB arizasi	
F 1	116	DC veri yolu düşük voltaj koruması	
LO	134	DC kompresör envertör modülü arızası	
L1	135	DC veri yolu düşük gerilim koruması (çoğunlukla kompresör çalışırken envertör modülünden)	
L2	136	DC sürücüsünden DC veri yolu yüksek gerilim koruması	
L4	138	MCE arızası	
L5	139	Sıfır hız koruması	
L7	141	Faz sırası arızası	
L8	142	Kompresör frekansı değişimi, bir saniyelik koruma içerisinde 15 Hz değerinden daha fazla	
L9	143	Gerçek kompresör frekansı, hedef frekanstan 15 Hz'lik korumadan daha fazla değişiklik gösteriyor	

NOT

ΝΟΤ

NOT

Kod No: B.13.5.3

Revizyon Tarihi: 15/08/2023

🖸 Alarko



ALARKO CARRIER SANAYİ VE TİCARET A.Ş.

ISTANBUL	: GOSB - Gebze Org. San. Bölgesi, S. Bilgisu Cad. 41480 Gebze-KOCAELİ
	Tel: (0262) 648 60 00 - Fax: (0262) 648 60 08
ANKARA	: Sedat Simavi Sok. No: 48, 06550 Çankaya - ANKARA
	Tel: (0312) 409 52 00 - Fax: (0312) 440 79 30
IZMIR	: Şehit Fethibey Cad. No:55, Kat:13, 35210 Pasaport - IZMIR
	Tel: (0232) 483 25 60 - Fax: (0232) 441 55 13
ADANA	: Ziyapaşa Bulvarı Çelik Ap. No : 25/5-6, 01130 ADANA
	Tel: (0322) 457 62 23 - Fax: (0322) 453 05 84
ANTALYA	: Mehmetçik Mahallesi Aspendos Bulvarı No: 79/5 - ANTALYA
	Tel: (0242) 322 00 29 - Fax: (0242) 322 87 66
MDH	: 444 0 128



Scan the QR code to install the control APP.



Thank you very much for purchasing our product.

Before using your unit, please read this manual carefully and keep it for future reference.

- This manual gives detailed description of the precautions that should be brought to your attention during operation.
- In order to ensure correct service of the wired controller, please read this manual carefully before using the unit.
- For convenience of future reference, keep this manual after reading it.

CONTENTS

1 GENERAL SAFETY PRECAUTIONS

	•	1.1 1.2	About the documentation For the user	01 02
2	A	GLA	ANCE OF THE USER INTERFACE	
	•	2.1 2.2	The appearance of the wired controller Status icons	05 06
3	U	SINC	G HOME PAGES	

3.1 About home pages ······ 07

4 MENU STRUCTURE

•	4.1	About the menu structure	11
•	4.2	To go to the menu structure	11
•	4.3	To navigate in the menu structure	11

5 BASIC USAGE

•	5.1	Screen unlock ·····	12
•	5.2	Turning ON/OFF controls	14
•	5.3	Adjusting the temperature	19
•	5.4	Adjusting space operation mode	22

6 NETWORK CONFIGURATION GUIDELINES

•	6.1	Wired controller setting ·····	25
•	6.2	Mobile device setting	28

7 INSTALLATION MANUAL

8	Μ	ODE	BUS MAPPING TABLE	
	٠	7.4	Front cover installation	46
	•	7.3	Installation procedure and matching setting of wired controller	39
	٠	7.2	Other precautions	38
	٠	7.1	Safety precaution	35

• 8.1 Modbus port communication specification 48
1 GENERAL SAFETY PRECAUTIONS

1.1 About the documentation

- The original documentation is written in English. All other languages are translations.
- The precautions described in this document cover very important topics, follow them carefully.
- All activities described in the installation manual must be performed by an authorized installer.
- 1.1.1 Meaning of warnings and symbols

Indicates a situation that results in death or serious injury.

.....

⚠ DANGER: RISK OF ELECTROCUTION

Indicates a situation that could result in electrocution.

⚠̀ DANGER: RISK OF BURNING

Indicates a situation that could result in burning because of extreme hot or cold temperatures.

Indicates a situation that could result in death or serious injury.

Indicates a situation that could result in minor or moderate injury.

♀ NOTE

Indicates a situation that could result in equipment or property damage.

i INFORMATION

Indicates useful tips or additional information.

1.2 For the user

• If you are not sure how to operate the unit, contact your installer.

 The appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children must be supervised to ensure that they do not play with the product.

Do NOT rinse the unit. This may cause electric shocks or fire.

.....

♀ NOTE

- Do NOT place any objects or equipment on top of the unit.
- Do NOT sit, climb or stand on the unit.

• Units are marked with the following symbol:



This means that electrical and electronic products may not be mixed with unsorted household waste. Do not try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, of oil and of other parts must be done by an authorized installer and must comply with applicable legislation. Units must be treated at a specialized treatment facility for reuse, recycling and recovery. By ensuring this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health. For more information, contact your installer or local authority.

2 A GLANCE OF THE USER INTERFACE

2.1 The appearance of the wired controller



2.2 Status icons



3 USING HOME PAGES

3.1 About home pages

You can use the home pages to read out and change settings that are meant for daily usage. What you can see and do on the home pages is described where applicable. Depending on the system layout, the following home pages may be possible:

- Room desired temperature (ROOM)
- Water flow desired temperature (MAIN)
- DHW tank actual temperature (TANK)

DHW=domestic hot water

home page1 :

If you have set the WATER FLOW TEMP. as YES and ROOM TEMP. as NON, the system has the function including floor heating and making hot water. The following page will appear:

NOTE

All the pictures in the manual are used to explain, the actual pages in the screen may have some difference.

01-01-2018 🕂	23:59) ☆13°
J≋	ON	Ĩ,
∆ 23 °°	Ŋ.	38 [∘]
1		

home page2 :

If you have set the WATER FLOW TEMP. as NON and ROOM TEMP. as YES, the system has the function including floor heating and making hot water. The following page will appear:

NOTE

The interface should be installed in the floor heating room to check the room temperature.

01-01-2018 🕂	23:59	Э ☆13°
₩	ON	Ĩ ♣
23,5 ℃	-ờ-	38 [∘]
1		

home page3 :

If the DHW MODE is set NON, and if "WATER FLOW TEMP." is set YES, "ROOM TEMP." is set YES, There will be main page and additional page. The system has the function including floor heating and space cooling for fan coil, home page 3 will appear:



home page4 :

If the DHW MODE is set YES. There will be main page and addition page. The system has the function including floor heating, space cooling for fan coil and domestic hot water, home page 4 will appear:



4 MENU STRUCTURE

4.1 About the menu structure

You can use the menu structure to read out and configure settings that are NOT meant for daily usage. What you can see and do in the menu structure is described where applicable.

4.2 To go to the menu structure

From a home page, press " 🗉 ". Result: The menu structure appear:

MENU 1/2	MENU 2/2
OPERATION MODE	SERVICE INFORMATION
PRESET TEMPERATURE	OPERATION PARAMETER
DOMESTIC HOT WATER(DHW)	FOR SERVICEMAN
SCHEDULE	WLAN SETTING
OPTIONS	SN VIEW
CHILD LOCK	
ENTER	E ENTER

4.3 To navigate in the menu structure

Use"▼"、 "▲" to scroll.

5 BASIC USAGE

5.1 Screen Unlock

If the icon 🕂 is on the screen, the controller is locked. The following page is displayed:



Press any key, the icon will flash. Long press the " " key. The icon will disappear, the interface can be controlled.



The interface will be locked if there is no handing for a long time(about 120 seconds) If the inerface is unlocked, long press " \mathfrak{g} ", the interface will be locked.

01-01-2018	23:59	企 13°
<u></u>	ON	Ĩ Ŝ
∂23 ° ^c	-ờ	38 °℃
<u>ت</u>		
Long press ස්	+ †	Long press ටී
01-01-2018 🕂	23:59	☆13°
≣	ON	
∂23 ° ^c	-ờ-	38 °℃
Ш		

5.2 Turning ON/OFF controls

Use the interface to turn on or off the unit for space heating or cooling.

- The ON/OFF of the unit can be controlled by the interface if the ROOM TEHERMOSTAT is NON.(See "ROOM THERMOSTAT SETTING" in "Installation and owner's manual (M-thermal split indoor unit)")
- Press "◀ "、 "▲" on home page,the black cursor will appear:







If the DHW TYPE is set NON, then following pages will display:

If the TEMP. TYPE is set ROOM TEMP. , then following pages will display:

01-01-2018	23:59	① 13°		01-01-2018	23:59	① 13°
_ <u>≈</u>	ON	هرآ م		P	OFF	Ē,
23,5 ^{°°}	-ờ-	38 °℃		23,5 [℃]	X	38 °℃
	i				·	
[↑				I↑	
		(Ċ]		
		l	-Ñ-			
			11	r -		
		15	1	1		

Use the room thermostat to turn on or off the unit for space heating or cooling.

① The room thermostat is SET YES(see "ROOM THERMOSTAT SETTING" on "Installation and owner's manual (M-thermal split indoor unit)") the unit is turned on or off by the room thermostat, press 🙂 on the interface, the following page will display:

01-01-2018	23:59	☆ 13°
Turning on or heating mode the room therr Please turn or heating mode thermostat.	off cooling/ is controllemostat. In or off cooling by the roon	d by ing/ n
CONFIRM		

② DUAL ROOM THERMOSTAT is set YES(see "ROOM THERMOSTAT SETTING" in "Installation and owner's manual (M-thermal split indoor unit)").The room thermostat for fan coil is turned off, the room thermostat for the floor heating is turned on, and the unit is running, but the display is OFF. The following page is displayed:

01-01-2018	23:59	습13°	01-01-2018 23:	·59 ①13°
E	ON	°	<u>₩</u> 2	ON
ბ 38 °℃	-ờ-	38 °℃	23,5 [∞]	-ờ-

01-01-2018	23:59	☆ 13°	01-01-2018 23	:59 介13°
÷	OFF	se se se se se se se se se se se se se s	2 2	OFF
∆ <mark>38</mark> °°	-ờ-	38 °⁻	23,5 ^{°°}	-ờ:-

Use the interface to turn on or off the unit for DHW.Press " \blacktriangleright ", " \forall "on home page,the black cursor will appear:

01-01-2018	23:59	① 13°
∬≋	ON	چې **
∂23 °°	-ờ-	38 [∘]

2) When the cursor is on DHW operation mode. Press " ${\, {\mathfrak O} \,}$ " key to turn on/off the DHW mode.

If the space operation is ON, then following pages will display:



5.3 Adjusting the temperature

Press " \blacktriangleleft " \checkmark " on home page, the black cursor will appear:



If the cursor is on the temperature, use the "◄"、 "▶" to select and use
"♥"、 "▲" to adjust the temperature.







5.4 Adjusting space operation mode

 Adjusting space operation mode by interface. Go to "⊟" > " OPERATION MODE". Press" → ", the following page will appear:

OPERATION MODE			
Operation mode setting:			
HEAT	000∟ ₩	AUTO	

There are three modes to be selected including HEAT, COOL and AUTO mode. Use the "◄", "▶" to scroll, press " ←" to select. Even if you don't press OK button and exit the page by pressing ⊃ button, the mode would still effective if the cursor have be moved to the operation mode.

If there is only HEAT(COOL) mode, the following page will appear:



• The operation mode can not be changed see cool MODE SETTING on installation and ower's manual.

If you select	Then the space operation mode is
-Ò- heat	Always heating mode
₩ cool	Always cooling mode
(A) auto	Automatically changed by the software based on the outdoor temperature (and depending on installer settings of the indoor temperature), and takes monthly restrictions into account. Note: Automatic changeover is only possible under certain conditions. See the FOR SERVICEMAN> AUTO MODE SETTING in "Installation and ower's manual (M-thermal split indoor unit)".

 Adjust space operation mode by the room thermostat, see "ROOM THERMOSTAT" on "Installation and owner's manual (M-thermal split indoor unit)".

Go to \Box >OPERATION MODE, if you press any key to select or adjust, the follpage will appear:



6 Network Configuration Guidelines

- The wired controller realizes intelligent control with a built-in module, which receives control signal from the APP.
- Before connecting the WLAN, please check for it if the router in your environment is active and make sure that the wired controller is well-connected to the wireless signal.
- During the Wireless distribution process, the LCD icon " ? "flashes to indicate that the network is being deployed. After the process is completed, the icon " ? " will be constantly on.

6.1 Wired Controller Setting

The wired controller settings include AP MODE and RESTORE WLAN SETTING.

WLAN SETTING
AP MODE
RESTORE WLAN SETTING
ENTER

Press", the following page will appear:

AP MODE	
Do you want to act WLAN network and	vate the I exit?
NO	YES
	•

Use "◀", "▶" to move to "YES", press "←" to select AP mode. Select AP Mode correspondingly on the mobile device and continue the follow-up settings according to the APP prompts.

After enter Ap mode, if it's not connected with mobile phone, the LCD icon " $rac{1}{rac{1}{rac{2}}}$ " will flash 10 minutes then disappear.

If it's connected with the mobile phone, the icon " \clubsuit " will be constantly display.

Press" ← ", the following page will appear:

RESTORE WLAN SETTING		
Do you want to restore the WLAN setting and exit?		
NO	YES	
CONFIRM		♪

Use " \blacktriangleleft ", " \triangleright " to move to "YES", press " \leftarrow " to restore WLAN setting. Complete the above operation and wireless configuration is reset.

6.2 Mobile Device Setting

AP Mode is available for wireless distribution on mobile device side.

• AP Mode connecting WLAN:

6.2.1 Install APP

(1) Scan the following QR code to install the Smart Home APP.



② Please research "Comfort Home" in APP STORE or GOOGLE PLAY to install the APP.

This APP is only applicable to Android 7.0 and IOS7, or newer operation systems.

6.2.2 Sign in/Sign up

Please input your registration code.

Or scan the QR code on the controller packaging box if existed. And register your account according to the guidance.





6.2.3 Add Home Appliances:

1) Add your device following the guidance.



2) Operate the wired controller according to APP prompts.



3) Wait for the home appliance to connect, and click "Sure".



- After the appliance is successfully connected, the LCD icon" right of the wired controller is constantly on, and the heat pump can be controlled through the APP.
- 5) If the network distribution process fails, or the mobile connection demands reconnection and replacement, operate "RESTORE WLAN SETTING" on the wired controller, and then repeat the above process.



Warning and troubleshooting for networking failures

When the product is connected to the network, please make sure that the phone is as close as possible to the product.

We only support 2.4GHz band routers at present.

Special characters (punctuation, spaces, etc.) are not recommended as part of the WLAN name.

It is recommended that you connect no more than 10 devices to a single router lest home appliances are affected by weak or unstable network signal.

If the password of the router or WLAN is changed, clear all settings and reset the appliance.

.....

The contents of APP might change in version updates and actual operation shall prevail.

WIFI information

WIFI transmit frequency range:2.400 \sim 2.4835 GHz EIRP not more than 20dbm

7 INSTALLATION MANUAL

7.1 Safety precaution

- Read the safety precautions carefully before installing the unit.
- Stated below are important safety issues that must be obeyed.
- Conform there is no abnormal phenomena during test operation after complete, then hand the manual to the user.
- Meaning of marks:

Means improper handling may lead to personal death or severe injury.

Means improper handling may lead to personal injury or property loss.

Please entrust the distributor or professionals to install the unit. Installation by other persons may lead to imperfect installation, electric shock or fire.

Strictly follow this manual.

Imporper installation may lead to electric shock or fire.

Reinstallation must be performed by professionals. improper installation may lead to electric shock or fire.

Do not disassemble your heat pump at will.

A random disassembly may cause abnormal operation or heating, which may result in fire.

Do not install the unit in a place vulnerable to leakage of flammable gases.

Once flammable gases are leaked and left around the wired controller, fire may occure.

.....

The wiring should adapt to the wired controller current.

Otherwise, electric leakage or heating may occur and result in fire.

The specified cables shall be applied in the wiring. No external force may be applied to the terminal.

Otherwise, wire cut and heating may occur and result in fire.

Do not place the wired remote controller near the lamps, to avoid the remote signal of the controller to be disturbed. (refer to the right figure)



7.2 Other Precautions

7.2.1. Installation location

Do not install the unit in a place with much oil, steam, sulfide gas. Otherwise, the product may deform and fail.

7.2.2 Preparation before installation

1) Check whether the following assemblies are complete.

No.	Name	Qty.	Remarks
1	Wired Controller	1	
2	Cross round head wood mounting screw	3	For Mounting on the Wall
3	Cross round head mounting screw	2	For Mounting on the Electrical Switch Box
4	Installation and Owner's Manual	1	
5	Plastic bolt	2	This accessory is used when install the centralized control inside the electric cabinet
6	Plastic expansion pipe	3	For mounting on the Wall

7.2.3 Note for installation of wired controller:

1) This installation manual contains information about the procedure of installing Wired Remote Controller. Please refer to Indoor Unit Installation Manual for connection between Wired Remote Controller and Indoor Unit.

2) Circuit of Wired Remote Controller is low voltage circuit. Never connect it with a standard 220V/380V circuit or put it into a same Wiring Tube with the circuit.

3) The shielded cable must be connected stable to the ground, or transmission may fail.

4) Do not attempt to extend the shielded cable by cutting, if it is necessary, use Terminal Connection Block to connect.

5) After finishing connection, do not use Megger to have the insulation check for the signal wire.

7.3 Installation procedure and matching setting of wired controller

7.3.1 Structure size figure



7.3.2 Wiring

Input Voltage(A/B)	13.5VAC
Wiring size	0.75mm ²



7.3.3 Back cover installation





1) Use straight head screwdriver to insert in the buckling position in the bottom of wired controller, and spin the screwdriver to take down the back cover. (Pay attention to spinning direction, otherwise will damage the back cover!)

2) Use three M4X20 screws to directly install the back cover on the wall.

3) Use two M4X25 screws to install the back cover on the 86 electrician box, and use one M4X20 screws for fixing on the wall.

4) Adjust the length of two plastic screw bars in the accessory to be standard length from the electrical box screw bar to the wall. Make sure while installing the screw bar to the wall, making it as flat as the wall.

5) Use cross head screws to fix the wired controller bottom cover in the wall through the screw bar. Make sure the wired controller bottom cover is on the same level after installation, and then install the wired controller back to the bottom cover.

6) Over fastening the screw will lead to deform tion of back cover.





Avoid the water enter into the wired remote controller, use trap and putty to seal the connectors of wires during wiring installation.

7.4 Front cover installation

After adjusting the front cover and then buckle the front cover; avoid clamping the communication switching wire during installation.



Sensor can not be affected with damp.

Correct install the back cover and firmly buckle the front cover and back cover, otherwise will make the front cover drop off.



8 MODBUS MAPPING TABLE

8.1 Modbus Port Communication Specification

Port: RS-485; the wired controller XYE is the communication port for connecting with the hydraulic module. H1 and H2 are the Modbus communication ports.

Communication address: It is consistent with the DIP switch address of the hydraulic module.

Baud rate: 9600. Number of digits: Eight Verification: none Stop Bit: 1 bit Communication protocol: Modbus RTU (Modbus ASCII is not supported)

8.1.1 Mapping of registers in the wired controller

The following addresses can use 03H, 06H (write single register), 10H (write multiple register)

Register address	Description	Remarks		
0	Power on or off	BIT15	Reserved	
(PLC:40001)	40001)	BIT14	Reserved	
		BIT13	Reserved	
		BIT12	Reserved	
		BIT11	Reserved	
		BIT10	Reserved	
		BIT9	Reserved	
		BIT8	Reserved	
		BIT7	Reserved	
		BIT6	Reserved	
		BIT5	Reserved	
		BIT4	Reserved	
		BIT3	0: power off floor heating; 1: power on floor heating;(zone 2) (water flow temperature control)	
		BIT2	0: DHW(T5S) power off; 1: DHW(T5S) power on	
		BIT1	0: power off floor heating; 1: power on floor heating;(zone 1) (water flow temperature control)	
		BIT0	0: power off air conditioner; 1: power on air conditioner; (zone 1) (room temperature control)	

2(PLC: 40003) Setting 3(PLC: 40004) Setting 4(PLC: 40005) T5s 5(PLC: 40006) Function 6 (PLC: 40007) Curve 7(PLC: 40008) Forced	g water water erature T1S g air temperature Ts	Bit8-Bit15 Bit0-Bit7 The room te Portocol val The water ta BIT15	Water temperature T1s is corresponding to the floor heating.(zone 2) Water temperature T1s is corresponding to the floor heating.(zone 1) Imperature range is between 17°C and 30°C, and is valid when there is Ta ue=actual value"2 ank temperature range is between 20°C and 60°C.		
4(PLC: 40004) Setting 3(PLC: 40005) T5s 5(PLC: 40006) Function 6 (PLC: 40007) Curve 7(PLC: 40008) Forced	g air temperature Ts	Bit0-Bit7 The room te Portocol val The water ta BIT15	Water temperature T1s is corresponding to the floor heating.(zone 1) mperature range is between 17°C and 30°C, and is valid when there is Ta ue=actual value*2 ank temperature range is between 20°C and 60°C.		
3(PLC: 40004) Setting 4(PLC: 40005) T5s 5(PLC: 40006) Function 6 (PLC: 40007) Curve 7(PLC: 40008) Forced	g air temperature Ts	The room te Portocol val The water ta BIT15	emperature range is between 17°C and 30°C, and is valid when there is Ta ue=actual value*2 		
4(PLC: 40005) T5s 5(PLC: 40006) Function 6 (PLC: 40007) Curve 7(PLC: 40008) Forced		The water ta BIT15	ank temperature range is between 20°C and 60°C.		
5(PLC: 40006) Function 6 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT15	The water tank temperature range is between 20°C and 60°C.		
5(PLC: 40006) Function 5 (PLC: 40007) Curve 7 (PLC: 40008) Forced		1	Reserved		
5(PLC: 40006) Function 3 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT14	Reserved		
5(PLC: 40006) Function 3 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT13	1: climate curve setting is valid; 0: climate curve setting is invalid. (zone2)		
5(PLC: 40006) Function 3 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT12	1: climate curve setting is valid; 0: climate curve setting is invalid. (zone1)		
5(PLC: 40006) Function 5 (PLC: 40007) Curve 7 (PLC: 40008) Forced		BIT11	DHW pump's running constant-temperature water recycling		
5(PLC: 40006) Function 5 (PLC: 40007) Curve 7(PLC: 40008) Forced	Function Setting	BIT10	ECO mode		
5 (PLC: 40006) Funda 5 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT9	Reserved		
5 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT8	Holiday home (the status can only be read, not changed)		
6 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT7	0: Silent mode level1; 1: Silent mode level2		
6 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT6	Silent mode		
8 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT5	Holiday away (the status can only be read, but cannot be changed)		
6 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT4	Disinfect		
6 (PLC: 40007) Curve 7(PLC: 40008) Forced		BIT3	Reserved		
3 (PLC: 40007) Curve '(PLC: 40008) Forced		BIT2	Reserved		
(PLC: 40007) Curve (PLC: 40008) Forced		BIT1	Reserved		
6 (PLC: 40007) Curve (PLC: 40008) Forced		BIT0	Reserved		
(PLC: 40007) Curve	Curve selection	Bit8-Bit15	Climate Curve 1-9(zone 2)		
7(PLC: 40008) Forced		Bit0-Bit7	Climate Curve 1-9(zone 1)		
	d water heating	0: Invalid 1: Forced	TBH is the electric water tank heater. IBH1 and 2 are the hydraulic module's rear electric heater. IBH1 and 2 can be activated tooether.		
3 (PLC: 40009) Forced	d TBH	2: Forced	TBH cannot be activated together with IBH1 and IBH2.		
9(PLC: 40010) Forced	d IBH1				
10(PLC: 40011) t_SG_I	MAX		0-24 Hours		
11(PLC: 40012) T1S		Water ten	nperature T1S is corresponding to the floor heating.(zone 1)		
12(PLC: 40013) T1S		Water ten	nperature T1S is corresponding to the floor heating.(zone 2)		
13(PLC: 40014) t_ANT		Default setting: 5, range: 0~60 S(Available in Sphera A)			

In cooling mode, TTS low temp setting range is 5~25 C;TTS high temp setting range is 16~25 C. In heating mode, TTS low temp setting range is 25~55°C;TTS high temp setting range is 35~65°C. 8.1.2 When the wired controller is connected to the hydraulic module, the parameters of the whole unit can be checked:

The following address table can only use 03H function code(Read register). Whole unit parameter mapping address table

Register address Description Remarks 100(PLC: 40101) Operating frequency Compressor operating frequency in Hz 01(PLC: 40102) Operating Mode Outdoor unit's actual operating mode, 2: cooling, 3: heating, 0: off 102(PLC: 40103) Fan Speed Fan speed, in r/min 103(PLC: 40104) PMV openness Openness of the outdoor unit's electronic expansion valve in p 104(PLC: 40105) Water inlet temperature TW_in, unit: "C 105(PLC: 40106) Water outlet temperature Condenser temperature, unit: "C 107(PLC: 40108) T4 Temperature Outdoor ambient temperature thunit: "C 108(PLC: 40109) Discharge temperature Condenser temperature thunit: "C 109(PLC: 40101) Suction temperature Compressor suction temperature thunit: "C 101(PLC: 40111) T1 System total water outlet temperature, unit: "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: "C 113(PLC: 40113) T2 Refrigerant liquid side temperature, unit: "C 113(PLC: 40113) T2 Refrigerant liquid side temperature, unit: "C 113(PLC: 40113) T2 Refrigerant liquid side temperature, u	I) Running parameters				
100(PLC: 40101) Operating frequency Compressor operating frequency in Hz 101(PLC: 40102) Operating Mode Outdoor unit's actual operating mode, 2: cooling, 3: heating, 0: off 102(PLC: 40103) Fan Speed Fan speed, in r/min 103(PLC: 40104) PMV openness Openness of the outdoor unit's electronic expansion valve in p 104(PLC: 40105) Water inlet temperature TW_in, unit: "C 105(PLC: 40106) Water outlet temperature TW_out, unit: "C 106(PLC: 40108) Temperature Outdoor ambient temperature, unit: "C 107(PLC: 40108) Temperature Outdoor ambient temperature unit: "C 108(PLC: 40109) Discharge temperature Compressor discharge temperature Th, unit."C 109(PLC: 40101) T1 System total water outlet temperature unit: "C 110(PLC: 40111) T1 System total water outlet temperature, unit: "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: "C 113(PLC: 40113) T2 Refrigerant gas side temperature, unit: "C 114(PLC: 40114) T2B Refrigerant gas side temperature, unit: "C 114(PLC: 40113) T3 Water tank temperature, unit: "C 113(PLC: 40114) T4B	Register address	Description	Remarks		
01(PLC: 40102) Operating Mode Outdoor unit's actual operating mode, 2: cooling, 3: heating, 0: off 102(PLC: 40103) Fan Speed Fan speed, in r/min 103(PLC: 40104) PMV openness Openness of the outdoor unit's electronic expansion valve in p 104(PLC: 40105) Water inlet temperature TW_in, unit: °C 105(PLC: 40106) Water outlet temperature Condenser temperature, unit: °C 106(PLC: 40107) T3 Temperature Condenser temperature, unit: °C 107(PLC: 40108) T4 Temperature Condenser temperature unit: °C 108(PLC: 40109) Discharge temperature Compressor suction temperature Tp unit: °C 109(PLC: 40110) Suction temperature Compressor suction temperature (behind the auxiliary heater), unit: °C 110(PLC: 40111) T1 System total water outlet temperature, unit: °C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: °C 113(PLC: 40113) T2 Refrigerant gas side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 114(PLC: 40115) Ta Room temperature, unit: °C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 114(PLC: 40113)	100(PLC: 40101)	Operating frequency	Compressor operating frequency in Hz		
North ED: 40102/ pportuning index heating, D: off 102(PLC: 40103) Fan Speed Fan speed, in r/min 103(PLC: 40104) PMV openness Openness of the outdoor unit's electronic expansion valve in p 104(PLC: 40105) Water inlet temperature TW_in, unit: "C 105(PLC: 40106) Water outlet temperature TW_out, unit: "C 106(PLC: 40107) T3 Temperature Condenser temperature, unit: "C 107(PLC: 40108) T4 Temperature Cuddoor ambient temperature Th, unit: "C 108(PLC: 40109) Discharge temperature Compressor discharge temperature Th, unit: "C 109(PLC: 40110) Suction temperature Compressor discharge temperature Th, unit: "C 110(PLC: 40111) T1 System total water outlet temperature, unit: "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: "C 113(PLC: 40113) T2 Refrigerant liquid side temperature, unit: "C 113(PLC: 40113) T4 Room temperature, unit: "C 113(PLC: 40111) Ta Room temperature, unit: "C 114(PLC: 40113) T4 Room temperature, unit: "C 113(PLC: 40113) Ta Room temperature, unit: "C 114(PLC: 401	101(PLC: 40102)	Operating Mode	Outdoor unit's actual operating mode, 2: cooling, 3:		
102(PLC: 40103) [Fan Speed Fan speed, in r/min 103(PLC: 40104) PMV openness Openness of the outdoor unit's electronic expansion valve in p 104(PLC: 40105) Water inlet temperature TW_in, unit: "C 105(PLC: 40106) Water outlet temperature TW_out, unit: "C 106(PLC: 40107) T3 Temperature Condenser temperature, unit: "C 107(PLC: 40108) T4 Temperature Outdoor ambient temperature unit: "C 108(PLC: 40109) Discharge temperature Condenser temperature function: "C 109(PLC: 40109) Discharge temperature Compressor discharge temperature function: "C 109(PLC: 40110) Suction temperature Compressor discharge temperature functi: "C 111(PLC: 40111) T1 System total water outlet temperature, unit: "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: "C 113(PLC: 40113) T2 Refrigerant gas side temperature, unit: "C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: "C 114(PLC: 40115) Ta Room temperature, unit: "C 113(PLC: 40116) T5 Water tank temperature, unit: "C 113(PLC: 40117) Pressure 1 Outdoor unit low pressure value, unit: kPa	101(1 20. 40102)	operating mode	heating, 0: off		
103(PLC: 40104) PMV openness Openness of the outdoor unit's electronic expansion valve in p 104(PLC: 40105) Water inlet temperature TW_in, unit: "C 105(PLC: 40106) Water outlet temperature TW_out, unit: "C 106(PLC: 40106) Ta Temperature Condenser temperature, unit: "C 107(PLC: 40108) Ta Temperature Outdoor ambient temperature unit: "C 108(PLC: 40109) Discharge temperature Compressor suction temperature Tp unit: "C 109(PLC: 40101) T1 System total water outlet temperature (behind the auxiliary heater), unit: "C 110(PLC: 40111) T1 System total water outlet temperature, unit: "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: "C 112(PLC: 40113) T2 Refrigerant gas side temperature, unit: "C 113(PLC: 40114) T3 Room temperature, unit: "C 114(PLC: 40115) Ta Room temperature, unit: "C 114(PLC: 40116) T5 Water tank temperature, unit: "C 114(PLC: 40113) Pressure 1 Outdoor unit outre, unit: "C 114(PLC: 40116) T5 Water tank temperature, unit: "C 114(PLC: 40116) </td <td>102(PLC: 40103)</td> <td>Fan Speed</td> <td>Fan speed, in r/min</td>	102(PLC: 40103)	Fan Speed	Fan speed, in r/min		
104(PLC: 40105) Water inlet temperature TW_in, unit: "C 105(PLC: 40106) Water outlet temperature TW_out, unit: "C 106(PLC: 40107) T3 Temperature Condenser temperature, unit: "C 107(PLC: 40108) T4 Temperature Outdoor ambient temperature unit: "C 108(PLC: 40109) Discharge temperature Condenser temperature temperature Tp unit: "C 109(PLC: 40109) Discharge temperature Compressor discharge temperature Th, unit: "C 109(PLC: 40110) Suction temperature Compressor discharge temperature the unit: "C 110(PLC: 40111) T1 System total water outlet temperature, unit: "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: "C 113(PLC: 40113) T2 Refrigerant gas side temperature, unit: "C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: "C 114(PLC: 40115) Ta Room temperature, unit: "C 114(PLC: 40116) T5 Water anter temperature, unit: "C 114(PLC: 40117) Pressure 1 Outdoor unit low pressure value, unit: kPa 117(PLC: 40118) T5 Water anter temperating, unit: V 114(PLC: 40119) Outdoor unit operating current, unit: A 1	103(PLC: 40104)	PMV openness	Openness of the outdoor unit's electronic expansion valve in P		
105(PLC: 40106) Water outlet temperature TW_out, unit: °C 106(PLC: 40107) T3 Temperature Condenser temperature, unit: °C 107(PLC: 40108) T4 Temperature Outdoor ambient temperature unit: °C 108(PLC: 40109) Discharge temperature Compressor suction temperature Tp unit: °C 108(PLC: 40109) Discharge temperature Compressor suction temperature Tp, unit: °C 109(PLC: 40110) Suction temperature Compressor suction temperature Th, unit: °C 110(PLC: 40111) T1 System total water outlet temperature, unit: °C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: °C 113(PLC: 40113) T2 Refrigerant gas side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 113(PLC: 40115) Ta Room temperature, unit: °C 113(PLC: 40116) T5 Water tank temperature, unit: °C 114(PLC: 40118) Pressure 1 Outdoor unit low pressure value, unit: kPa 113(PLC: 40118) Pressure 2 Outdoor unit outloage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 113(PLC: 40121) Tbt1 Tbt1, unit: °C 120(PLC:	104(PLC: 40105)	Water inlet temperature	TW_in, unit: °C		
106(PLC: 40107) T3 Temperature Condenser temperature, unit: "C 107(PLC: 40108) T4 Temperature Outdoor ambient temperature Tp unit: "C 108(PLC: 40109) Discharge temperature Compressor discharge temperature Tp unit: "C 109(PLC: 40110) Suction temperature Compressor discharge temperature Tp, unit: "C 109(PLC: 40110) Suction temperature Compressor suction temperature Th, unit: "C 110(PLC: 40111) T1 System total water outlet temperature (behind the auxiliary heater), unit: "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: "C 112(PLC: 40113) T2 Refrigerant liquid side temperature, unit: "C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: "C 114(PLC: 40115) Ta Room temperature, unit: "C 115(PLC: 40116) T5 Water tank temperature, unit: "C 116(PLC: 40116) Pressure 1 Outdoor unit by pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit oy pressure value, unit: kPa 117(PLC: 40119) Outdoor unit out operating current, unit: A 119(PLC: 40120) 119(PLC: 40120) Outdoor unit out operating current, unit: A 119(PLC: 40120) Outdoor unit voltage </td <td>105(PLC: 40106)</td> <td>Water outlet temperature</td> <td>TW_out, unit: °C</td>	105(PLC: 40106)	Water outlet temperature	TW_out, unit: °C		
107(PLC: 40108) T4 Temperature Outdoor ambient temperature unit: °C 108(PLC: 40109) Discharge temperature Compressor discharge temperature Th, unit: °C 109(PLC: 40110) Suction temperature Compressor discharge temperature Th, unit: °C 110(PLC: 40111) T1 System total water outlet temperature (behind the auxiliary heater), unit: °C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: °C 113(PLC: 40113) T2 Refrigerant liquid side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant liquid side temperature, unit: °C 113(PLC: 40115) Ta Room temperature, unit: °C 114(PLC: 40115) Ta Room temperature, unit: °C 115(PLC: 40116) T5 Water tank temperature, unit: °C 116(PLC: 40117) Pressure 1 Outdoor unit high pressure value, unit: kPa 117(PLC: 40119) Outdoor unit ourie tour out ourie operating current, unit: A 119(PLC: 40119) Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30 meas 4-30kW 124(PLC: 40125) Fault 1 Check the code	106(PLC: 40107)	T3 Temperature	Condenser temperature, unit: °C		
108(PLC: 40109) Discharge temperature Compressor discharge temperature Th, unit. "C 109(PLC: 40110) Suction temperature Compressor suction temperature Th, unit. "C 110(PLC: 40111) T1 System total water outlet temperature (behind the auxiliary heater), unit. "C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit. "C 112(PLC: 40113) T2 Refrigerant liquid side temperature, unit. "C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit. "C 114(PLC: 40115) Ta Room temperature, unit. "C 114(PLC: 40116) T5 Water tank temperature, unit. "C 116(PLC: 40116) T5 Water tank temperature, unit. "C 116(PLC: 40116) T6 Outdoor unit loy pressure value, unit. kPa 117(PLC: 40118) Pressure 2 Outdoor unit operating current, unit. A 118(PLC: 40119) Outdoor unit voltage, unit. V 20(PLC: 40120) 120(PLC: 40121) Tbt1 Tbt1, unit. "C 121(PLC: 40122) Tbt2 Tbt2, unit. "C 122(PLC: 40123) Compressor operating time in hour 202(PLC: 40124) 121(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30	107(PLC: 40108)	T4 Temperature	Outdoor ambient temperature unit: °C		
109(PLC: 40110) Suction temperature Compressor suction temperature Th, unit: °C 110(PLC: 40111) T1 System total water outlet temperature (behind the auxiliary heater), unit: °C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: °C 111(PLC: 40113) T2 Refrigerant liquid side temperature, unit: °C 113(PLC: 40113) T2 Refrigerant gas side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 114(PLC: 40115) Ta Room temperature, unit: °C 115(PLC: 40116) Ta Room temperature, unit: °C 116(PLC: 40116) Ta Room temperature, unit: °C 116(PLC: 40118) Pressure 1 Outdoor unit high pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operating time in hour 123(PLC: 40124) Unit capacity 00 means 4-30kW	108(PLC: 40109)	Discharge temperature	Compressor discharge temperature Tp unit: °C		
110(PLC: 40111) T1 System total water outlet temperature (behind the auxiliary heater), unit: °C 111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: °C 112(PLC: 40113) T2 Refrigerant liquid side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant liquid side temperature, unit: °C 113(PLC: 40115) Ta Room temperature, unit: °C 115(PLC: 40116) T5 Water tank temperature, unit: °C 116(PLC: 40117) Pressure 1 Outdoor unit high pressure value, unit: kPa 117(PLC: 40117) Pressure 2 Outdoor unit operating current, unit: A 119(PLC: 40120) Outdoor unit out operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30 means 4-30kW 124(PLC: 40125) Fault 1 Check the code table for detailed fault codes. 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 126(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	109(PLC: 40110)	Suction temperature	Compressor suction temperature Th, unit:°C		
Hole Control Image: Control 111(PLC: 40112) Tw2 Zone 2 water flow temperature , unit: °C 1112(PLC: 40113) T2 Refrigerant liquid side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 114(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 114(PLC: 40116) Ta Room temperature, unit: °C 115(PLC: 40117) Pressure 1 Outdoor unit low pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit operating current, unit: A 118(PLC: 40119) Outdoor unit voltage, unit: V 20(PLC: 40122) 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40123) Compressor operating time in hour 122(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30 means 4-30KW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	110(PLC: 40111)	T1	System total water outlet temperature (behind the auxiliary		
111(PLC: 40112) Tw2 Zone 2 water flow temperature, unit: °C 112(PLC: 40113) T2 Refrigerant liquid side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant igas side temperature, unit: °C 113(PLC: 40115) Ta Room temperature, unit: °C 114(PLC: 40115) Ta Room temperature, unit: °C 115(PLC: 40116) Ta Room temperature, unit: °C 116(PLC: 40116) Ta Room temperature, unit: °C 116(PLC: 40116) Tessure 1 Outdoor unit high pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30 means 4-30kW 124(PLC: 40125) Current fault Check the code table for detailed fault codes. 125(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	110(1 LO. 40111)		heater) ,unit: °C		
112(PLC: 40113) T2 Refrigerant liquid side temperature, unit: °C 113(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 114(PLC: 40115) Ta Room temperature, unit: °C 115(PLC: 40116) T5 Water tank temperature, unit: °C 115(PLC: 40117) Pressure 1 Outdoor unit high pressure value, unit: %C 116(PLC: 40117) Pressure 2 Outdoor unit low pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit low pressure value, unit: kPa 118(PLC: 40112) Outdoor unit out our unit current Outdoor unit operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30 means 4-30KW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	111(PLC: 40112)	Tw2	Zone 2 water flow temperature , unit: °C		
113(PLC: 40114) T2B Refrigerant gas side temperature, unit: °C 114(PLC: 40115) Ta Room temperature, unit: °C 114(PLC: 40115) Ta Room temperature, unit: °C 115(PLC: 40116) T5 Water tank temperature, unit: °C 116(PLC: 40117) Pressure 1 Outdoor unit high pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit tow pressure value, unit: kPa 118(PLC: 40120) Outdoor unit out operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30KW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	112(PLC: 40113)	T2	Refrigerant liquid side temperature, unit: °C		
114(PLC: 40115) Ta Room temperature, unit: °C 115(PLC: 40116) T5 Water tank temperature, unit: °C 116(PLC: 40117) Pressure 1 Outdoor unit tipp pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit top pressure value, unit: kPa 117(PLC: 40119) Outdoor unit operating current, unit: A 118(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30 means 4-30KW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	113(PLC: 40114)	T2B	Refrigerant gas side temperature, unit: °C		
115(PLC: 40116) T5 Water tank temperature, unit: "C 116(PLC: 40117) Pressure 1 Outdoor unit high pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit high pressure value, unit: kPa 118(PLC: 40119) Outdoor unit operating current, unit: A 118(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: "C 121(PLC: 40123) Compressor operation time Compressor operating time in hour 122(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4-30 means 4-30kW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40128) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	114(PLC: 40115)	Та	Room temperature, unit: °C		
116(PLC: 40117) Pressure 1 Outdoor unit high pressure value, unit: kPa 117(PLC: 40118) Pressure 2 Outdoor unit low pressure value, unit: kPa 118(PLC: 40118) Outdoor unit ounit cournent Outdoor unit operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30KW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	115(PLC: 40116)	Т5	Water tank temperature, unit: °C		
117(PLC: 40118) Pressure 2 Outdoor unit low pressure value, unit: kPa 118(PLC: 40119) Outdoor unit operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 123(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30KW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	116(PLC: 40117)	Pressure 1	Outdoor unit high pressure value, unit: kPa		
118(PLC: 40119) Outdoor unit ourrent Outdoor unit operating current, unit: A 119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: *C 121(PLC: 40122) Tbt2 Tbt2, unit: *C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30kW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	117(PLC: 40118)	Pressure 2	Outdoor unit low pressure value, unit: kPa		
119(PLC: 40120) Outdoor unit voltage Outdoor unit voltage, unit: V 120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30kW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	118(PLC: 40119)	Outdoor unit current	Outdoor unit operating current, unit: A		
120(PLC: 40121) Tbt1 Tbt1, unit: °C 121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30KW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	119(PLC: 40120)	Outdoor unit voltage	Outdoor unit voltage, unit: V		
121(PLC: 40122) Tbt2 Tbt2, unit: °C 122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40123) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30kW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 126(PLC: 40128) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	120(PLC: 40121)	Tbt1	Tbt1, unit: °C		
122(PLC: 40123) Compressor operation time Compressor operating time in hour 123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30kW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 126(PLC: 40128) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	121(PLC: 40122)	Tbt2	Tbt2, unit: °C		
123(PLC: 40124) Unit capacity 0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30kW 124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 Check the code table for detailed fault codes. 126(PLC: 40127) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3 Check the code table for detailed fault codes.	122(PLC: 40123)	Compressor operation time	Compressor operating time in hour		
124(PLC: 40125) Current fault Check the code table for detailed fault codes 125(PLC: 40126) Fault 1 126(PLC: 40127) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3	123(PLC: 40124)	Unit capacity	0702 for 200 register is reserved. When it is 071x, data 4- 30 means 4-30kW		
125(PLC: 40126) Fault 1 126(PLC: 40127) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3	124(PLC: 40125)	Current fault	Check the code table for detailed fault codes		
126(PLC: 40127) Fault 2 Check the code table for detailed fault codes. 127(PLC: 40128) Fault 3	125(PLC: 40126)	Fault 1			
127(PLC: 40128) Fault 3	126(PLC: 40127)	Fault 2	Check the code table for detailed fault codes.		
	127(PLC: 40128)	Fault 3			

		BIT15	Request to send operation parameter, 1: request; 0: not request
		BIT14	Request to send software version, 1: request; 0: not request
		BIT13	Request to send SN code, 1: request; 0: not request
		BIT12	Reserved
		BIT11	EUV 1: free electricity; 0: judge by SG's signal
		BIT10	SG 1: normal electricity; 0: high price electr
		51110	icity (judge when EUV is 0)
		BIT9	Anti-freezing operation for water tank
128(PLC: 40129)	Status bit 1	BIT8	Solar energy signal input
		BIT7	Cooling mode set by room thermostat
		BIT6	Heating mode set by room thermostat
		BIT5	Outdoor unit test mode mark
		BIT4	Remote On/Off (1: d8)
		BIT3	Oil return
		BIT2	Anti-freezing
		BIT1	Defrosting
		BIT0	Reserved
		BIT15	DEFROST
		BIT14	Auxiliary heat source
		BIT13	RUN
		BIT12	ALARM
		BIT11	Solar water pump
		BIT10	HEAT4
		BIT9	SV3
120/01 (0: 40120)	Lood output	BIT8	Mixed water pump P_c
129(PLC. 40130)	Load output	BIT7	Water return water P d
		BIT6	External water pump P_o
		BIT5	SV2
		BIT4	SV1
		BIT3	Water pump PUMP 1
		BIT2	Electric heater TBH
		BIT1	Electric heater IBH2
		BIT0	Electric heater IBH1
130(PLC: 40131)	Software version	1~99 is	the software version of hydronic module
131(PLC: 40132)	Wired controller version No.	1~99 is	the wired controller's version number.

132(PLC: 10133)	Lipit target frequency	Hz		
132(FLC: 40133)		Linite A		
133(PLC: 40134)	DC bus current	Unit: A	1 (10) 11	
134(PLC: 40135)	DC bus voltage	The actual v	/alue/10, unit: V	
135(PLC: 40136)	TF module temperature	Feedback o	n outdoor unit, unit: °C	
136(PLC: 40137)	136(PLC: 40137) Climate curve T1S calculated value 1		oonding calculated T1S of zone 1	
137(PLC: 40138) Climate curve T1S calculated value 2		The corresp	The corresponding calculated T1S of zone 2	
138(PLC: 40139)	Water flow	The actual v	/alue*100, unit: m3/H	
139(PLC: 40140) Limit scheme of outdoor unit current		Scheme val	ue	
140(PLC: 40141) Ability of Hyd raulic module		The actual v	value*100, unit: kW	
141(PLC: 40142)	Tsolar	Tsolar		
142(PLC: 40143)	Quantity of units in	BIT1-BIT15	Respectively represent the online status of slaves unit 1-15	
	paraner	BIT0	Reserved	
143(PLC: 40144)	(PLC: 40144) Higher bits for electricity consumption			
144(PLC: 40145) Lower bits for electricity consumption				
145(PLC: 40146) Higher bits for power output				
146(PLC: 40147) Lower bits for power output				

Note :

1. When Tw2 unavailable, "25" would display in upper unit address 113.

2. When T2B unavailable, the wired controller would display"--" and "25" would display in upper unit address 113.

3.When Ta unavailable, "25" would display in upper unit address 114.

4. When E series without Tbt1、Tbt2, the wired controller would display"--" and "0" would display in upper unit addresses 120 and 121.

The following register address 200-208 can only use 03H(Read register) function code. Register address 209 and follows can use 03H, 06H (write single register), 10H (write multiple register).

Parameter setti	ng			
Register address	Description	Remarks		
200(PLC: 40201)	Home appliance type	The upper 8 bits are the types of home appliances: Air to water heat pump: 0x07 The middle 4 bits are product codes: 0x1* The lower 4 bits are sub-type: R32: 0x ²		
201(PLC: 40202)	Temperature upper limit of T1S cooling	Lower 8 bits are for zone 1. higher 8 bits are for zone 2		
202(PLC: 40203)	Temperature lower limit of T1S cooling	Lower 8 bits are for zone 1. higher 8 bits are for zone 2		
203(PLC: 40204)	Temperature upper limit of T1S heating	Lower 8 bits are for zone 1. higher 8 bits are for zone 2		
204(PLC: 40205)	Temperature lower limit of T1S heating	Lower 8 bits are for zone 1. higher 8 bits are for zone 2		
205(PLC: 40206)	Temperature upper limit of TS setting	Protocol value = actual value * 2		
206(PLC: 40207)	Temperature lower limit of TS setting	Protocol value = actual value * 2		
207(PLC: 40208)	Temperature upper limit of water heating			
208(PLC: 40209)	Temperature lower limit of water heating			
209(PLC: 40210)	PUMP RUNNING TIME	DHW PUMP water return running time. It is five minutes by default and can be adjusted between 5 and 120 min at an interval of 1 min.		
210(PLC: 40211)	Parameter setting 1	BIT15 Enable water heating BIT14 Supports water tank electric heater TBH(Read-only) BIT13 Supports disinfection BIT13 DHW PUMP, 1: supported; 0: not supported BIT10 DHW PUMP, 1: supported; 0: not supported BIT11 Reserved BIT10 DHW pump is valid in disinfection mode BIT3 Dipto Pump is valid in disinfection mode BIT6 TIS cooling high/how temperature settings(Read-only) BIT7 Enable heating BIT6 PUMP isient mode; 1: valid, 0: invalid BIT7 Enable heating BIT6 Supports room temperature settings(Read-only) BIT7 Bind mode; 1: valid, 0: invalid BIT7 Bind mode; 1: valid, 0: invalid BIT6 Bind mode; 1: valid, 0: invalid BIT7 Bind mode; 1: valid, 0: invalid BIT8 Bind mode; 1: valid, 0: invalid BIT8 Bind mode; 1: valid, 0: invalid BIT8 Bind mode; 1: valid, 0: invalid BIT4 Bind mode; 1: valid, 0: invalid BIT8 Bind mode; 1: valid, 0: invalid BIT9 Bind mode; 1: valid, 0: invalid BIT4		

54

		BIT15	ACS(Double water tank control)		
		BIT1/	M1M2 is used for AHS control 1: Yes 0: No		
		DITIT	RT Ta PCNEn(enable Temperature Collection Kit) 1:		
		BIT13	Yes 0: No		
		BIT12	Tbt2 sensor is valid 1: Yes 0: No		
		BIT11	Piping length selection 1: >10m 0: <10m		
		BIT10	Solar energy input port 1: CN18 0: CN11		
211/01 C: 40212)	Baramatar a atting 2	BIT9	Solar energy kit enable 1: Yes 0: No		
211(PLC: 40212)	Parameter's etting 2	BIT8	Define the port, 0=remote ON/OFF; 1=DHW heater		
		BIT7	Smart grid, 0=NON; 1=YES		
		BIT6	Tw2 sensor enable 0: None 1: Yes		
		BIT5	Cooling high/low temperature setting T1S2 for Zone 2 (read only)		
		BIT4	Heating high/low temperature setting T1S2 for Zone 2 (read only)		
		BIT3	Double zone setting is valid		
		BIT2	Ta sensor position 1: IDU 0: HMI		
		BIT1	Tbt1 sensor enable1: Yes 0: No		
		BIT0 IBH/AHS installation position 1: buffer tank 0: pipe C			
212(PLC: 40213)	dT5_On	Default setting: 10° C, range: 1~30° C;			
213(PLC: 40214)	dT1S5	Default	t setting: 10° C, range: 5~40° C, setting interval: 1°		
214(PLC: 40215)	T_Interval_DHW	Default	t setting: 5 min, range: 5~5 min, setting interval: 1 min		
215(PLC: 40216)	T4DHWmax	Default setting: 43°C, range: 35~43°C, setting interval: 1°C			
216(PLC: 40217)	T4DHWmin	Default: -10° C, range: -25~30° C;			
217(PLC: 40218)	t_TBH_delay	Default setting: 30 min, range: 0~240 min, setting interval: 5 min			
218(PLC: 40219)	dT5S_TBH_off	Default setting: 5°C, range: 0~10°C, setting interval: 1°C			
219(PLC: 40220)	T4_TBH_on	Default setting: 5°C, range: -5~50°C;			
220(PLC: 40221)	T5s_DI	Temperature for the disinfection operation, range: 60~70 $^{\circ}$ C, default setting: 65 $^{\circ}$ C			

221(PLC: 40222)	t_DI_max	Maximum disinfection duration, range: 90~300 min, default setting: 210 min
222(PLC: 40223)	t_DI_hightemp	Disinfection high temperature duration, range: 5~60 min, default setting: 15 min
223(PLC: 40224)	t_interval_C	Time interval of compressor start-up in cooling mode; range: 5~5 min, default setting: 5 min
224(PLC: 40225)	dT1SC	Default setting: 5°C, range: 2~10°C, setting interval: 1°C
225(PLC: 40226)	dTSC	Default setting: 2°C, range: 1~10°C, setting interval: 1°C
226(PLC: 40227)	T4cmax	Default setting: 52°C, range: 35~52°C, setting interval: 1°C
227(PLC: 40228)	T4cmin	Default setting: 10°C, range: -5~25°C, setting interval: 1°C
228(PLC: 40229)	t_interval_H	Time interval of compressor start-up in the heating mode; range: 5~5 min, default setting: 5 min
229(PLC: 40230)	dT1SH	Default setting: 5°C, range: 2-20°C;
230(PLC: 40231)	dTSH	Default setting: 2°C, range: 1~10°C, setting interval: 1°C
231(PLC: 40232)	T4hmax	Default setting: 25°C, range: 20~35°C, setting interval: 1°C
232(PLC: 40233)	T4hmin	Default setting: -15° C, range: -25-30° C, Setting interval1° C
233(PLC: 40234)	T4_IBH_on	Ambient temperature for enabling the hydraulic module auxiliary electric heating IBH, range: -15~10°C; default setting: -5°C
234(PLC: 40235)	dT1_IBH_on	Temperature return difference for enabling the hydraulic module auxiliary, range: 2~10°C; default setting: 5°C
235(PLC: 40236)	t_IBH_delay	Delay time of enabling the hydraulic module auxiliary electric heating IBH,range: 15~120 min; default setting: 30 min
237(PLC: 40238)	T4_AHS_on	The trigger ambient temperature for turning on AHS range: -15~30°C;default setting: -5°C
238(PLC: 40239)	dT1_AHS_on	The temperature difference between the heat pump 's leaving water set temperature (T1S) and the heat,range: 2~20°C; default setting: 5°C
240(PLC: 40241)	t_AHS_delay	Delay time for enabling the external heater AHS, range: 5~120 min; default setting: 30 min

241(PLC: 40242)	t_DHWHP_max	Longest duration of water heating by the heat pump, range: 10~600 min, default setting: 90 min;
242(PLC: 40243)	t_DHWHP_restrict	Duration of limited water heating by the heat pump, range: 10~600 min, default setting: 30 min;
243(PLC: 40244)	T4autocmin	Default setting: 25°C, range: 20~29°C, setting interval: 1°C
244(PLC: 40245)	T4autohmax	Default setting: 17°C, range: 10~17°C, setting interval: 1°C
245(PLC: 40246)	T1S_H.A_H	Default setting: 25°C, range: 20~25°C, setting interval: 1°C
246(PLC: 40247)	T5S_H.A_DHW	In the holiday mode, setting of T1 in the water heating mode, range: 20~25°C, default setting: 25°C
247(PLC: 40248)	PER_START ratio	Range10-100, default setting10.Setting interval10
248(PLC: 40249)	TIME_ADJUST	Range1-60 default setting5
249(PLC: 40250)	dTbt2	Rrange0-50 default setting15
250(P LC: 40251)	IBH1 power	Range0-200, default setting0, unit: 100W
251(PLC: 40252)	IBH2 power	Range0-200, default setting0, unit: 100W
252(P LC: 40253)	TBH power	Range0-200, default setting0,unit: 100W
253(PLC: 40254	Comfort parameter	Reserved, wrong address is reported whe n this register is queried
254(P LC: 40255)	Comfort parameter	Reserved, wrong address is reported whe n this register is queried
255(PLC: 40256)	t_DRYUP	Temperature rise day number, range: 4~15 days, default setting: 8 days
256(PLC: 40257)	t_HIGHPEAK	Drying day number, range: 3~7 days, default setting: 5 days
257(PLC: 40258)	t_DRYD	Temperature drop day number, range: 4~15 days, default setting: 5 days
258(PLC: 40259)	T_DRYPEAK	Highest drying temperature, range: 30~55°C, default setting: 45° C
259(PLC: 40260)	t_firstFH	Running time of floor heating for the first time, default setting: 72 hrs, range: 48-96 hrs
260(PLC: 40261)	T1S (first floor heating)	T1S of floor heating for the first time, range: 25 ~ 35° C, default setting: 25° C

261(PLC: 40262)	T1SetC1	Parameter of the ninth temperature curves for cooling mode, range: 5~25°C, default setting: 10°C
262(PLC: 40263)	T1SetC2	Parameter of the ninth temperature curves for cooling mode, range: 5~25°C, default setting: 16°C
263(PLC: 40264)	T4C1	Parameter of the ninth temperature curves for cooling mode, range: (-5) ~46°C, default setting: 35°C
264(PLC: 40265)	T4C2	Parameter of the ninth temperature curves for cooling mode, range: (-5) ~46°C, default setting: 25°C
265(PLC: 40266)	T1SetH1	Parameter of the ninth temperature curves for heating mode, range: 25~65°C, default setting: 35°C
266(PLC: 40267)	T1SetH2	Parameter of the ninth temperature curves for heating mode, range: 25~65°C, default setting: 28°C
267(PLC: 40268)	T4H1	Parameter of the ninth temperature curves for heating mode, range: (-25) ~35°C, default setting: -5°C
268(PLC: 40269)	T4H2	Parameter of the ninth temperature curves for heating mode, range: (-25) ~35°C, default setting: 7°C
269(PLC: 40270)	POWER INPUT LIMITATION	The type of power input limitation, 0=NON, 1~8=type 1~8, default: 0
270/01 0: 40274)	HB: t_T4_FRESH_C	Range: 0.5~6 hour, setting interval: 0.5 hour, sending value=actural value*2
270(P LC. 40271)	LB: t_T4_FRESH_H	Range: 0.5~6 hour, setting interval: 0.5 hour, sending value=actural value*2
271(PLC: 40272)	T_PUMPI_DELAY	Range: 0.5~20 hour, setting interval: 0.5 hour, sending value=actural value*2
		Bit12-15: The type of zone 2 end for cooling mode
272(PLC: 40273)	EMISSION TYPE	Bit8-11: The type of zone 1 end for cooling mode
()		Bit4-7: The type of zone 2 end for heating mode
		Bitu-3: The type of zone T end for heating mode

8.1.3 Error code

Unit	Register address	Content	Remarks
E0	1	Water flow fault(E8 displayed 3 times)	
E1	2	Phase loss or neutral wire and live wire are connected	Only applies to 3-phase models
E2	3	Communication fault between controller and hydraulic	· · · ·
E3	4	Final outlet water temp. sensor(T1) fault	Sensor T1
E4	5	Water tank temp. sensor(T5) fault	Sensor T5
E5	6	The condenser outlet refrigerant temperature sensor(T3)	Sensor T3
E6	7	The ambient temperature sensor(T4) fault	Sensor T4
E7	8	Buffer tank up temp. sensor(Tbt1) fault	Sensor Tbt1
E8	9	Water flow failure	
E9	10	Compressor suction temp. sensor (Th) fault	Sensor Th
EA	11	Compressor discharge temp. sensor (Tp) fault	Sensor Tp
Eb	12	Solar temp. sensor(Tsolar) fault	
Ec	13	The balance tank low temp. sensor(Tbt2) fault	Sensor Tbt2
Ed	14	The plate exchanger water inlet temp. sensor(Tw in) fault	Sensor Tw in
EE	15	The main control board of hydraulic module EEPROM	
P0	20	Low pressure protection	
P1	21	High pressure protection	
P3	23	Compressor overcurrent protection	
P4	24	Compressor discharge temp. too high protection	
	25	High temperature difference protection between water	
P5		inlet and water outlet of the plate heat exchanger	
P6	26	Inverter module protection	Displayed on user interface when any of L0, L1, L2, L4,L5, L7, L8 or L9 occur
Pb	31	Anti-freeze mode protection	
Dd	33	High temperature protection of refrigerant outlet temp. of	
Pa		condenser	
PP	38	Water inlet temperature is higher than water outlet in	
		heating mode	
HO	39 40	Communication fault between main control board of	
		hydraulic module and main control board PCB B	
H1		Communication fault between inverter module PCB A and main control board PCB B	
H2	41	The plate exchanger refrigerant outlet(liquid pipe) temp.	Sensor T2
		sensor(T2) fault	
H3	42	The plate exchanger refrigerant outlet(gas pipe) temp.	Sensor T2B
		sensor(T2B) fault	001001 120
H4	43	Three times L0/L1 protection	
H5	44	Room temp. sensor(Ta) fault	Sensor Ta
H6	45	DC fan motor fault	
H7	46	Main circuit voltage protection fault	

Unit	Register address	Content	Remarks
H8	47	Pressure sensor fault	
H9	48	Zone 2 water flow temp. sensor(Tw2) fault	Sensor TW2
HA	49	The plate heat exchanger water outlet temperature sensor(Tw_out) fault	Sensor Tw_out
Hb	50	3 times PP protection and Tw_out<7℃	
Hd	52	Communication fault between master unit and slave unit(in parallel)	
HE	53	Communication fault between main board of hydraulic module and Ta/room thermostat transfer PCB	
HF	54	Inverter module board EE PROM fault	
HH	55	H6 display 10 times in 120 minutes	
HP	57	Low pressure protection (Pe<0.6) occurred 3 times in 1 hour in cooling mode	
C7	65	High temp. protection of inverter module	
bH	112	PED PCB fault	
F1	116	DC bus low voltage protection	
L0	134	DC compressor inverter module fault	
L1	135	DC bus low voltage protection(from inverter module mostly when compressor running)	
L2	136	DC bus high voltage protection from DC driver	
L4	138	MCE fault	
L5	139	Zero speed protection	
L7	141	Phase sequence fault	
L8	142	Compressor frequency variation greater than 15Hz within one second protection	
L9	143	Actual compressor frequency differs from target frequency by more than 15Hz protection	

NOTE

NOTE

NOTE

Kod No: B.13.5.3i

Revizyon Tarihi: 15/08/2023





ALARKO CARRIER SANAYİ VE TİCARET A.Ş.

ISTANBUL	: GOSB - Gebze Org, San, Bölgesi, S. Bilgisu Cad, 41480 Gebze-KOCAEL
	Tel: (0262) 648 60 00 - Fax: (0262) 648 60 08
ANKARA	: Sedat Simavi Sok. No: 48, 06550 Çankaya - ANKARA Tel: (0312) 409 52 00 - Fax: (0312) 440 79 30
İZMİR	: Şehit Fethibey Cad. No:55, Kat:13, 35210 Pasaport - IZMIR
	Tel: (0232) 483 25 60 - Fax: (0232) 441 55 13
ADANA	: Ziyapaşa Bulvarı Çelik Ap. No : 25/5-6, 01130 ADANA
	Tel: (0322) 457 62 23 - Fax: (0322) 453 05 84
ANTAL YA	: Mehmetçik Mahallesi Aspendos Bulvarı No: 79/5 - ANTALYA
	Tel: (0242) 322 00 29 - Fax: (0242) 322 87 66
MDH	: 444 0 128

web: www.alarko-carrier.com.tr e-posta: info@alarko-carrier.com.tr